

TEAC

SD-500HR

Hi-Res Digital Recorder

OWNER'S MANUAL



IMPORTANT SAFETY PRECAUTIONS



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

■ CAUTIONS ABOUT BATTERIES

This product uses batteries. Misuse of batteries could cause a leak, rupture or other trouble. Always abide by the following precautions when using batteries.

- Never recharge non-rechargeable batteries. The batteries could rupture or leak, causing fire or injury.
- When installing batteries, pay attention to the polarity indications (plus/minus (+/-) orientation), and install them correctly in the battery compartment as indicated. Putting them in backward could make the batteries rupture or leak, causing fire, injury or stains around them.
- When you store or dispose batteries, isolate their terminals with insulation tape or something like that to prevent them from contacting other batteries or metallic objects.
- When throwing used batteries away, follow the disposal instructions indicated on the batteries and the local disposal laws.
- Do not use batteries other than those specified. Do not mix and use new and old batteries or different types of batteries together. The batteries could rupture or leak, causing fire, injury or stains around them.
- Do not carry or store batteries together with small metal objects. The batteries could short, causing leak, rupture or other trouble.
- Do not heat or disassemble batteries. Do not put them in fire or water. Batteries could rupture or leak, causing fire, injury or stains around them.
- If the battery fluid leaks, wipe away any fluid on the battery case before inserting new batteries. If the battery fluid gets in an eye, it could cause loss of eyesight. If fluid does enter an eye, wash it out thoroughly with clean water without rubbing the eye and then consult a doctor immediately. If the fluid gets on a person's body or clothing, it could cause skin

injuries or burns. If this should happen, wash it off with clean water and then consult a doctor immediately.

- The unit power should be off when you install and replace batteries.
- Remove the batteries if you do not plan to use the unit for a long time. Batteries could rupture or leak, causing fire, injury or stains around them. If the battery fluid leaks, wipe away any fluid on the battery compartment before inserting new batteries.
- Do not disassemble a battery. The acid inside the battery could harm skin or clothing.



WARNING

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

- The remote control supplied with this product contains a coin/ button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have swallowed or placed inside any part of the body, seek immediate medical attention.

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- The apparatus draws nominal non-operating power from the AC outlet with its POWER or STANDBY/ON switch not in the ON position.
- The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- Caution should be taken when using earphones or headphones with the product because excessive sound pressure (volume) from earphones or headphones can cause hearing loss.
- If you are experiencing problems with this product, contact TEAC for a service referral. Do not use the product until it has been repaired.

CAUTION


- Do not expose this apparatus to drips or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
- If the product uses batteries (including a battery pack or installed batteries), they should not be exposed to sunshine, fire or excessive heat.
- CAUTION for products that use replaceable lithium batteries: there is danger of explosion if a battery is replaced with an incorrect type of battery. Replace only with the same or equivalent type.

WARNING

- Products with Class I construction are equipped with a power supply cord that has a grounding plug. The cord of such a product must be plugged into an AC outlet that has a protective grounding connection.

The nameplate is located on the bottom of the unit as shown below.

Front side

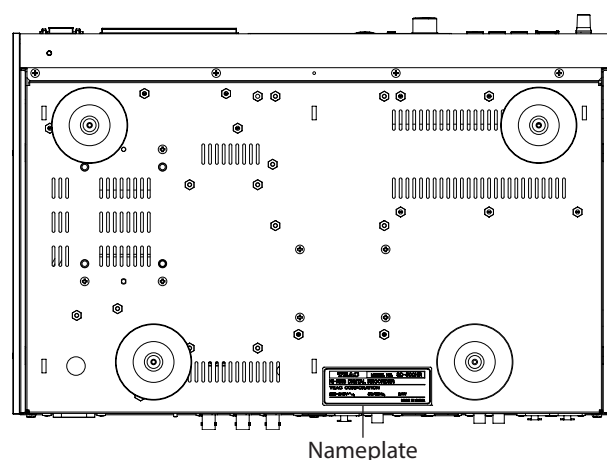

Nameplate

Contents

1 – Introduction	6	Using the sampling rate converter	21
Features	6	Monitoring the input signal	22
Included items	6	Adjusting the input signal level	22
Conventions used in this manual	6	Setting the peak hold indicators	22
Trademarks	7	Setting the master clock	23
Precautions for placement and use	7	Using this unit as an AD/DA converter	23
Power supply	7	Basic recording operations	24
Beware of condensation	7	Sync recording	24
Maintenance	7	Activating and setting sync recording	24
Editing software for high-resolution audio files available for free	7	Sync recording operation	25
Using the TEAC Global Site	7	Creating new higher-numbered tracks automati- cally	25
SD cards, CF cards and USB flash drives	8	Creating a higher numbered track manually	26
Precautions for use	8	Setting the automatic mark function	26
Media that has been confirmed for use with this unit	8	Adding marks manually during recording	27
SD card write protection	8	Adding marks when recording	27
SD card and CF card formatting	8	Setting the pause mode	27
		Setting the file name format	27
		Inputting and editing characters	28
		Media capacities and recording times	28
2 – Names and Functions of Parts	9		
Wireless remote control (TEAC RC-10)	12	5 – Folder and file operations (BROWSE screen) ..	29
Home Screen	12	Opening the BROWSE screen	29
Menu structure	13	BROWSE screen navigation	29
Menu screen operation basics	13	Icons on the BROWSE screen	29
Menu operation procedures	14	Folder operations	30
3 – Preparations	15	File operations	30
Preparing the remote control	16	Editing folder and file names	31
Installing the battery	16	Deleting folders and files	31
When to change the battery	16	Moving and copying folders and files	32
Warnings about battery use	16	Registering folders and files in a playlist	32
Using the wireless remote control	16	Viewing folder and file information	33
Turning the power on and off	17	Creating new folders	33
Setting the date and time	17	Dividing files	34
Adjusting the brightness	17	Undoing file division (UNDO/REDO)	35
Inserting and ejecting SD and CF cards	18		
Inserting SD and CF cards	18	6 – Playback	36
Ejecting SD and CF cards	18	Playable file types	36
SD card write protection	18	Files and tracks	36
Connecting/disconnecting USB flash drives	19	Basic playback operations	36
Connecting USB flash drives	19	Playback	36
Disconnecting USB flash drives	19	Selecting tracks	36
Selecting the media used	19	Skipping to the previous or next track	36
Preparing SD/CF cards and USB flash drives	19	Selecting tracks directly	36
		Searching backward and forward	36
4 – Recording	20	Locating to specific positions	37
Unexpected power interruptions	20	Locating to a position after partial entry	37
Selecting the input source	20	Adding marks manually during playback	37
Showing the input source	20	Adding marks during playback	37
Setting the recording file format	21	Locating to marks	37

Deleting marks.....	37
Setting the PLAY Mode.....	38
Repeat playback.....	38
Setting gapless playback mode	38
7 – Editing playlists.....	39
Overview of playlist editing	39
Opening the playlist screen	39
Registering tracks in a playlist.....	39
Using the playlist menu	39
Moving around playlists.....	39
Changing playlist names	40
Deleting playlists.....	40
Creating a new playlist.....	40
Playlist track menu operations.....	41
Changing the playlist track order.....	41
Removing tracks from playlists.....	41
8 – Miscellaneous functions.....	42
INFO button and indicator	42
Copying files between media (backing up)	42
Viewing information about the media.....	43
Restoring the factory settings.....	43
Using a USB keyboard	43
Setting the keyboard type.....	43
Using a keyboard to input text	44
Keyboard operation list	44
9 – Message Lists	45
10 – Troubleshooting	47
11 – Specifications	48
Media and formats	48
Inputs and outputs.....	48
Analog inputs	48
Analog outputs.....	48
Digital input	48
Digital output	48
Other connectors	48
Audio performance.....	49
Recording.....	49
Playback.....	49
Control input	49
General	49
Dimensional drawings	49
Block diagram.....	50

1 – Introduction

Thank you very much for purchasing a TEAC SD-500HR Hi-Res Digital Recorder.

Before connecting and using the unit, please take time to read this manual thoroughly to ensure you understand how to properly set up and connect the unit, as well as the operation of its many useful and convenient functions. After you have finished reading this manual, please keep it in a safe place for future reference.

You can also download the Owner's Manual from the TEAC Global Site (<http://teac-global.com/>).

Features

- 2-channel PCM recording at up to 192kHz/24-bit resolution
- 2-channel DSD recording at up to 5.6MHz
- SD card slot (supports SDHC standard for 4GB–32GB cards, supports SDXC standard for 64GB–256GB cards)
- CF card slot (supports UDMA)
- USB device port (for USB flash drives) supports playback and copying to and from SD/CF cards
- USB keyboard port allows a keyboard to be connected for text input and external control
- 24-dot level meters have excellent visibility and their brightness can be adjusted
- 128x64-dot OLED display with high visibility and a wide viewing angle
- TEAC RC-10 wireless remote control included
- Analog audio balanced and unbalanced connectors
- PCM digital audio AES-EBU/SPDIF connectors
- DSD digital audio SDIF-3/DSD-raw connectors
- WORD IN/OUT/THRU supported (OUT/THRU set with dedicated switch)
- ADDA DIRECT mode that enables use as a standalone AD/DA converter
- Temperature-compensated crystal oscillator (TCXO) enables high frequency precision (1 ppm or less)

Included items

This product includes the following items.

Take care when opening the package to avoid damaging the items. Keep the packing materials for transportation in the future.

Please contact the store where you purchased this unit if any of these items are missing or have been damaged during transportation.

- Main unitx1
 - Power cord.....x1
 - Wireless remote control unit (TEAC RC-10)x1
 - Lithium coin cell battery for remote control (CR2025 preinstalled in remote control)x1
 - RCA audio cable.....x1
 - Owner's Manual (this manual).....x1
- See page 51 for warranty information.

Conventions used in this manual

The following conventions are used in this manual.

- Buttons, connectors and other physical parts of this unit are indicated like this: **MENU** button
- Text displayed on the display of the unit and external devices appears like this: MENU.
- The item or character shown highlighted (colors inverted) on the display is referred to as the “cursor” in some cases.
- “CompactFlash card” is abbreviated as “CF card”.
- “SD memory card” is abbreviated as “SD card”.
- Additional information is provided as necessary as tips, notes and cautions.

TIP

These are tips about how to use the unit.

NOTE

These provide additional explanations and describe special cases.

CAUTION

Failure to follow these instructions could result in injury, damage to equipment or lost recording data, for example.

Trademarks

- SDXC Logo is a trademark of SD-3C, LLC.



- CompactFlash is a trademark of SanDisk Corporation, registered in the United States and other countries.
- Other company names, product names and logos in this document are the trademarks or registered trademarks of their respective owners.

Any data, including, but not limited to information, described herein are intended only as illustrations of such data and/or information and not as the specifications for such data and/or information. TEAC Corporation disclaims any warranty that any use of such data and/or information shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such data and/or information.

This product is designed to help you record and reproduce sound works to which you own the copyright, or where you have obtained permission from the copyright holder or the rightful licensor. Unless you own the copyright, or have obtained the appropriate permission from the copyright holder or the rightful licensor, your unauthorized recording, reproduction or distribution thereof may result in severe criminal penalties under copyright laws and international copyright treaties. If you are uncertain about your rights, contact your legal advisor. Under no circumstances will TEAC Corporation be responsible for the consequences of any illegal copying performed using the recorder.

Precautions for placement and use

- The operating temperature should be between 0°C and 40°C (32°F and 104°F).
- Do not install in the following types of places. Doing so could degrade the sound quality and/or cause malfunctions.
 - Places with significant vibrations or that are otherwise unstable
 - Near windows or other places exposed to direct sunlight
 - Near heaters or other extremely hot places
 - Extremely cold places
 - Places with bad ventilation or high humidity
 - Very dusty locations
- In order to assure good heat dissipation, do not place any object on top of the unit.
- Do not place the unit on top of a pre-main amplifier, power amplifier or other device that generates heat.

Power supply

Connect the unit to the standard power outlet. Hold the plug when connecting and disconnecting the power cord.

Beware of condensation

If the unit is moved from a cold to a warm place, or used immediately after a cold room has been heated or otherwise exposed to a sudden temperature change, condensation could occur. Should this happen, leave the unit for one or two hours before turning the unit on.

Maintenance

Wipe dirt from the top cover and other panel surfaces using a soft cloth that has been slightly dampened with a diluted neutral cleanser.

Do not wipe with chemical cleaning cloths, thinner or other chemical agents. Doing so could damage the surface.

⚠ For your safety, disconnect the power cord from the outlet before cleaning.

Editing software for high-resolution audio files available for free

By using the TEAC Hi-Res Editor software for editing high-resolution audio files, you can edit files recorded by this unit even more easily.

With support for audio files with high resolutions up to 11.2MHz DSD and 384kHz/32-bit PCM, this free software application can convert files between DSD and PCM formats and different sampling frequencies, for example. In addition to offering basic editing functions such as dividing and joining files, it allows you to set in and out points directly while looking at the waveform on screen in order to designate intervals that can be converted and saved.

TEAC Hi-Res Editor

https://teac.jp/int/product/teac_hi-res_editor/top

Using the TEAC Global Site

You can download updates for this unit from the TEAC Global Site:

<http://teac-global.com/>

- 1) Open the TEAC Global Site.
- 2) In the TEAC Downloads section, click the desired language to open the Downloads website page for that language.

NOTE

If the desired language does not appear, click Other Languages.

- 3) Click the product name in the "Products" section to open the Downloads page for that product.
- 4) Select and download the updates that are needed.

1 – Introduction

SD cards, CF cards and USB flash drives

This unit can use SD cards, CF cards and USB flash drives for playback and SD/CF cards for recording.

A list of SD cards, CF cards and USB flash drives that have been confirmed to operate with this unit can be found on the TEAC Global Site (<http://teac-global.com/>).

Precautions for use

SD cards, CF cards and USB flash drives are built with high precision. In order to prevent damage to a flash drive or card, follow these precautions when handling them.

- Do not leave them in extremely hot or cold places.
- Do not leave them in extremely humid places.
- Do not let them get wet.
- Do not put things on top of them or twist them.
- Do not allow them to be struck with force.
- Do not insert or remove them during recording, playback, data transfer or other operations that access them.
- When transporting cards, carry them inside a memory card case or similar protection.

Media that has been confirmed for use with this unit

This unit uses SD cards, CF cards and USB flash drives for playback and SD/CF cards for recording.

Microdrives cannot be used with this unit.

Moreover, some SD cards, CF cards and USB flash drives, especially older ones, use slower flash memory components or smaller internal buffers. When using an SD card, CF card or USB flash drive like this, the unit might not operate properly.

A list of SD cards, CF cards and USB flash drives that have been confirmed to operate with this unit can be found on the TEAC Global Site (<http://teac-global.com/>). Please refer to this. You can also contact the retailer where you purchased the unit..

SD card write protection


This unit writes track data to the media in order to improve performance. Since track data cannot be written to write-protected SD cards, media reading will take longer and performance could otherwise be affected.

SD card and CF card formatting

SD cards, CF cards and USB flash drives that have been formatted by this unit have been optimized to improve performance during recording. For this reason, you should use this unit to format the SD cards, CF cards and USB flash drives that you will use with it. Using an SD card, CF card or USB flash drive that has been formatted by a computer or other device might result in errors when recording with this unit.

2 – Names and Functions of Parts

Front panel

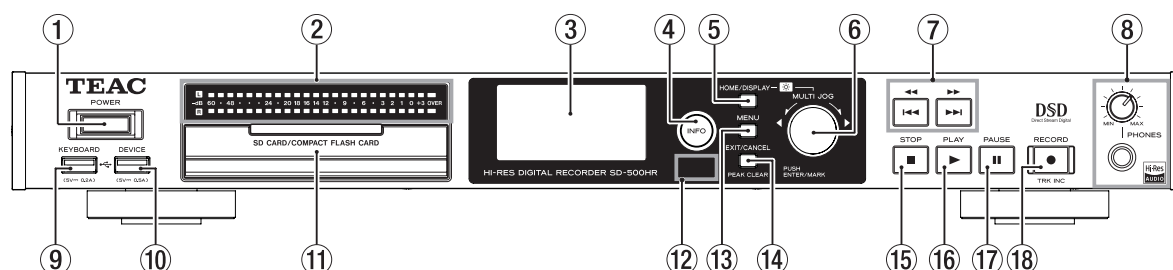

① POWER switch

Use to turn the unit on and off.

CAUTION

Before turning the power on, minimize the volume of other equipment that is connected to this unit. Failure to do so might cause sudden loud noises, which could harm your hearing or result in other trouble.

② Level meters

The level of the input or playback sounds is shown. These light green when below the reference level. These light orange when at or above the reference level but below 0 dB.

NOTE

When recording in PCM format, +3dB will not light.

③ Display

This shows a variety of information.

④ INFO button/indicator

Press this button when the **INFO** indicator is lit blue to show the operation status of the unit on the display and light the set reference level on the level meters. In addition, pressing this button when the **INFO** indicator is lit red will cause a message to appear on the display. (See "INFO button and indicator" on page 42.)

⑤ HOME/DISPLAY button

When a menu screen is open, press to return to the Home Screen.

Turn the **MULTI JOG** dial while pressing this button to adjust the brightness of the display and the indicators. (See "Adjusting the brightness" on page 17.)

⑥ MULTI JOG dial

This functions both as a dial and as a button.

Dial functions

When the Home Screen is open, use to skip between marks.

When in menu mode, use to select menu items and setting values.

When editing names, use to select characters.

While pressing and holding the **HOME/DISPLAY** button, turn to adjust the display and indicator brightness.

Turn when the **BROWSE** screen is open to select subfolders and files in the same folder. (See "BROWSE screen navigation" on page 29.)

Button functions

Use to confirm selections and settings (ENTER function).

When the **BROWSE** screen is open, press to open a pop-up menu for the selected folder or file. (See "Folder operations" on page 30.) (See "File operations" on page 30.)

Press when stopped, in playback standby, playing back or recording to add a mark. (See "Adding marks manually during recording" on page 27.) (See "Adding marks manually during playback" on page 37.)

⑦ <<[I<<<] / >>>[>>>I] buttons

Press briefly to skip to the previous or next track.

Press and hold to search backward or forward.

Press when the **BROWSE** screen is open to move up or down one level in the folder structure. (See "BROWSE screen navigation" on page 29.)

⑧ PHONES jack/knob

Use this standard stereo jack to connect stereo headphones. Use an adapter when connecting headphones with a mini plug.

Use this knob to adjust the headphones output level.

CAUTION

*Before connecting headphones, minimize the volume with the **PHONES** knob. Failure to do so might cause sudden loud noises, which could harm your hearing or result in other trouble.*

⑨ KEYBOARD connector

You can connect a USB keyboard here and use it to input folder and file names, for example, as well as to control the unit.

By default, the recorder is set use Japanese keyboards, which are arranged differently from English keyboards. To use an English keyboard, change the setting in the **KEYBOARD TYPE** screen. (See "Setting the keyboard type" on page 43.)

2 – Names and Functions of Parts

⑩ **DEVICE connector**

Use to connect a USB flash drive. (See “Connecting/disconnecting USB flash drives” on page 19.)

Connect a USB flash drive here to play back files on it and copy files between it and SD/CF cards. (See “Copying files between media (backing up)” on page 42.)

⑪ **SD and CF card slots**

Insert and eject SD and CF cards from here. (See “Inserting and ejecting SD and CF cards” on page 18.)

⑫ **Remote sensor**

Receives signals from the included remote control (TEAC RC-10). When using the remote point it here.

⑬ **MENU button**

When the Home Screen is open, press to access the menu screens. (See “Menu structure” on page 13.) (See “Menu screen operation basics” on page 13.)

⑭ **EXIT/CANCEL [PEAK CLEAR] Button**

Press this when a settings screen is open to go back one level in the menu.

When a confirmation pop-up message is open, press this to answer “NO”.

When the Home Screen is open, press this to clear the level meter peak hold indicators.

⑮ **STOP button**

Stops playback and recording.

⑯ **PLAY button/indicator**

Press when stopped or in playback standby to start playback.

Press in recording standby to start recording.

During playback or recording, this button lights.

⑰ **PAUSE button/indicator**

Press when stopped or during playback to switch to playback standby.

Press when recording to switch to recording standby.

The button lights when in playback standby and recording standby.

⑱ **RECORD [TRK INC] button/indicator**


Press when stopped to start recording standby.

Press when recording to start a new track and continue recording without interruption. (See “Creating a higher numbered track manually” on page 26.)

The button lights when recording and in recording standby.

Press when there is no media in the current device to activate input monitoring, causing the currently selected input signal to be output. The button blinks during input monitoring.

Rear panel

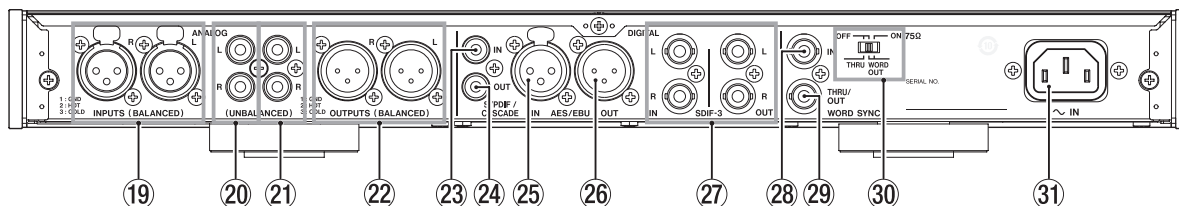

19 L/R ANALOG INPUTS (BALANCED)

These balanced analog XLR input connectors have a default nominal input level of +4 dBu.

20 L/R ANALOG INPUTS (UNBALANCED)

These analog RCA pin input jacks have a nominal input level of –10 dBV.

21 L/R ANALOG OUTPUTS (UNBALANCED)

These analog RCA pin output jacks have a nominal output level of –10 dBV.

22 L/R ANALOG OUTPUTS (BALANCED)

These balanced analog XLR output jacks have a nominal output level of +4 dBu.

23 DIGITAL IN(S/PDIF / CASCADE)

These are digital audio input connectors.

This digital input jack has a sampling rate converter that supports 32 — 192 kHz. (See “Using the sampling rate converter” on page 21.)

24 DIGITAL OUT(S/PDIF / CASCADE)

This digital output jack can output digital audio in IEC60958-3 (S/PDIF) format.

CAUTION

The DIGITAL IN and OUT (S/PDIF/CASCADE) connectors of this unit do not support CASCADE connections.

25 DIGITAL IN (AES/EBU)

This balanced XLR digital audio input jack supports the input of AES3-2003/IEC60958-4 (AES/EBU) format digital audio.

This digital input jack has a sampling rate converter that supports 32 — 192 kHz. (See “Using the sampling rate converter” on page 21.)

26 DIGITAL OUT (AES/EBU)

This balanced XLR digital audio output jack can output digital audio in AES3-2003/IEC60958-4 (AES/EBU) format.

CAUTION

When the DIGITAL IN/OUT (SDIF-3) connectors are connected, the DIGITAL IN/OUT (S/PDIF / CASCADE) and DIGITAL IN/OUT (AES/EBU) connectors cannot be used to input and output digital audio signals.

27 DIGITAL IN/OUT(SDIF-3) connectors

These are digital audio input and output connectors for DSD signals.

These are digital audio input and output connectors for the SDIF-3 (DSD-raw) format.

Each connector carries either the left or right channel of the stereo signal.

CAUTION

When the DIGITAL IN/OUT (SDIF-3) connectors are connected, all digital audio devices (including this unit) in the system must be synchronized to the same clock source. To sync this unit to an external clock, input a 44.1kHz clock signal through its WORD SYNC IN connector.

If the clock master within the system is set to 44.1kHz, DSD audio sources will become clock slaves. For details see, “Setting the master clock” on page 23.

28 WORD SYNC IN connector

Use to input a word clock signal.

When syncing this unit to an external clock signal, the word clock signal input through this connector is used.

29 WORD SYNC THRU/OUT connector

This is a BNC word clock through/output connector that can output a word clock signal (thru or 44.1kHz, 48kHz, 88.2kHz, 96kHz, 176.4kHz or 192kHz).

Use the THRU/WORD OUT switch to change between thru and word output.

30 75Ω ON/OFF [THRU/WORD OUT] switch

Use to make the following settings.


- Whether or not the **WORD SYNC IN** connector has termination resistance (75 Ω)
- **WORD SYNC THRU/OUT** connector **THRU/OUT** setting

31 AC IN connector

Connect the included power cord here.

2 – Names and Functions of Parts


Wireless remote control (TEAC RC-10)

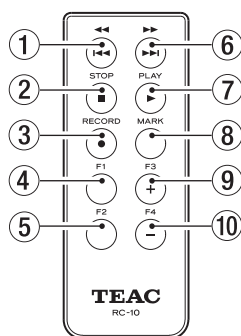

- ① **◀◀ / ▶▶ button**
During playback, press briefly to skip to the beginning of the track.
When near the beginning of a track, press briefly to skip to the beginning of the previous track.
Press and hold to search backward.
Press when the **BROWSE** screen is open to move up one level in the folder structure.
- ② **STOP [■] button**
Press to stop playback and recording.
- ③ **RECORD [●] button**
Press when stopped to start recording standby.
Press during recording to create a new higher-numbered track and continue recording without interruption. (See “Creating a higher numbered track manually” on page 26.)
- ④ **F1 button**
Press when stopped or during playback to switch to playback standby.
Press when recording to switch to recording standby.
- ⑤ **F2 button**
When a menu screen is open, press to return to the Home Screen.
Press when the Home Screen is open to change the display mode. (See “Home Screen” on page 12.)
- ⑥ **▶▶ / ▶▶▶ button**
Press briefly to skip to the next track.
Press and hold to search forward.
Press when the **BROWSE** screen is open to move down one level in the folder structure.
- ⑦ **PLAY [▶] button**
Press when stopped or in playback standby to start playback.
Press in recording standby to start recording.
- ⑧ **MARK button**
Press when stopped, recording, in playback standby or during playback to manually add a mark. (See “Adding marks manually during recording” on page 27.) (See “Adding marks manually during playback” on page 37.)
- ⑨ **F3 [+] button**
Skip to the next mark.
Press when the **BROWSE** screen is open to move the cursor up. (See “BROWSE screen navigation” on page 29.)
- ⑩ **F4 [-] button**
Skip to the previous mark.
Press when the **BROWSE** screen is open to move the cursor down. (See “BROWSE screen navigation” on page 29.)

Home Screen

The main unit display shows the following information.

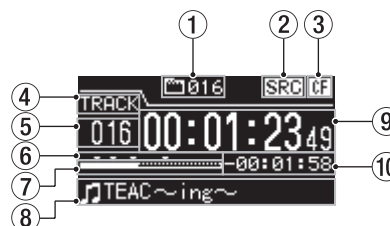

- ① **Total number of tracks**
This shows the total number of tracks in the playback area.
- ② **SRC operation indicator**
When the sampling rate converter is on, an “SRC” indicator appears here. When SRC is off, nothing appears here. (See “Using the sampling rate converter” on page 21.)
- ③ **Current device**
This icon shows the currently selected device.
- ④ **Display mode**
This is the current Home Screen display mode.
The unit has two display modes. The **TRACK** mode shows the elapsed time and remaining time of the current file, and the **TOTAL** mode shows the elapsed time and remaining time of all tracks.
- ⑤ **Track number**
This is the number of the track that is playing.
- ⑥ **Mark indicators**
These are the locations of marks in the track.
- ⑦ **Track playback position**
This shows the current playback position as a bar. As playback advances, the bar extends from the left to the right.
- ⑧ **Track title**
This is the file name of the track that is playing.
- ⑨ **Track elapsed time**
Depending on the display mode, this shows the elapsed time (hours: minutes: seconds) of all the tracks in the current playback area or of the currently playing track.
- ⑩ **Track remaining time**
This is the remaining time (hours: minutes: seconds) of the current track or all the tracks in the current playback area.
Depending on the display mode, this shows the remaining time (hours: minutes: seconds) of all the tracks in the current playback area or of the currently playing track. During recording, this shows the remaining available recording time on the current media.

2 – Names and Functions of Parts

Menu structure

Press the **MENU** button to open the GENERAL menu screen.



There are eight menu screens organized by menu item type.

GENERAL:	General function settings
REC FILE:	Recording file format settings
I/O SETTINGS:	Input and output settings
REC FUNC:	Recording function settings
PLAY FUNC:	Playback function settings
MEDIA:	Media operations
TRACK EDIT:	Current file editing
UTILITY:	System settings and other functions

The menu items are as follows.

Menu item	Function	Pages
BROWSE	Open the BROWSE screen	page 29
MEDIA SEL	Media selection	page 19
CLOCK MSTR	Master clock settings	page 23
FILE	Recording file format settings	page 21
SAMPLE	Sampling frequency settings	page 21
NAME	File name format settings	page 27
INPUT SEL.	Input source selection	page 20
INPUT VOL.	Input volume setting	page 22
SRC	Sampling rate converter settings	page 21
ADDA DIRECT	AD/DA DIRECT mode settings	page 23
IN MONITOR	Input monitoring function settings	page 22
SYNC REC	Synchronized recording function settings	page 24
AUTO TRACK	Automatic track incrementing function settings	page 25
AUTO MARK	Automatic mark function settings	page 26
PAUSE MODE	Pause mode settings	page 27
PLAY MODE	Play Mode setting	page 38
REPEAT	Repeat playback function settings	page 38
TRACK GAP	Gapless Playback mode setting	page 38
FORMAT	Media formatting	page 19
COPY	Media copy type selection	page 42
INFO.	View media information	page 43
RENAME	Edit folder and file names	page 31
DELETE	Delete folders and files	page 31
DIVIDE	Divide files	page 34
UNDO/REDO	Undo/redo DIVIDE operations*	page 35
F. PRESET	Restore the factory settings	page 43
KEYBOARD	Keyboard type setting	page 43
PEAK HOLD	Level meter peak hold time setting	page 22
CLOCK ADJUST	Time setting	page 17

*"UNDO" only appears after a DIVIDE operation has been conducted. REDO only appears after UNDO has been used in place of the UNDO option.

NOTE

 
The settings made in all the menus are retained even when the unit is turned off.

Menu screen operation basics


You can operate the menu screens in the following manner.

To change the menu page:

Press the **MENU** button repeatedly until the menu page that you want appears

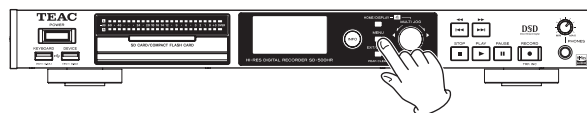

 Pushing the button cycles through the menu pages in the following order.

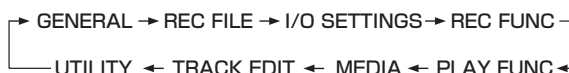

NOTE

*You can turn the **MULTI JOG** dial to move between the GENERAL menu screen BROWSE item and the UTILITY menu CLOCK ADJUST item one item at a time.*

However, it is not possible to move from the UTILITY menu CLOCK ADJUST item to the GENERAL menu BROWSE item or from the GENERAL page BROWSE item to the UTILITY menu CLOCK ADJUST item this way.

To select an item (vertically on the screen):

Turn the **MULTI JOG** dial.



To confirm the selection:

Press the **MULTI JOG** dial.



To open a submenu that is not shown on the display:

Press the **MULTI JOG** dial.



To move up one level in the menu:

Press the **EXIT/CANCEL [PEAK CLEAR]** button.

To return directly to the Home Screen from menu mode:


Press the **HOME/DISPLAY** button.

2 – Names and Functions of Parts

Menu operation procedures

This example explains how to set the AUTO MARK function.

1. Press the **MENU** button to open the GENERAL menu.

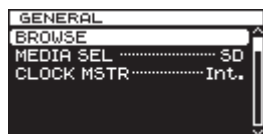

2. Press the **MENU** button to cycle through the menus.




REC FUNC menu is open

3. Turn the **MULTI JOG** dial to the item to set.



AUTO MARK item selected

4. Press the **MULTI JOG** dial to open the setting screen.

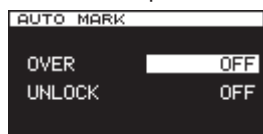

AUTO MARK screen open

5. Turn the **MULTI JOG** dial to change the setting.
6. To change the setting of a different item on the same screen, press the **MULTI JOG** dial to move the cursor to the next setting.
7. Turn the **MULTI JOG** dial to change the setting.
8. Repeat steps 5–7 as necessary to set other items.
9. Press the **MULTI JOG** dial to return to the menu. Press the **HOME/DISPLAY** button to return to the Home Screen.

NOTE

- Press the **EXIT/CANCEL [PEAK CLEAR]** button to cancel the menu operation and return to the menu screen.
- In step 9 above, pressing the **MULTI JOG** dial reopens the Home Screen in some cases.


3 – Preparations

Making connections

The following example shows connections with an SD-500HR.

■ Precautions before making connections

- Before making connections, read the operation manuals of the other equipment carefully and connect each one correctly.
- Turn OFF (or put in standby) the power of this unit and all other devices before connecting them.
- Connect all the devices to the same power supply line. When using a power strip, for example, use a thick cable with a high current capacity to minimize variation in the power voltage.

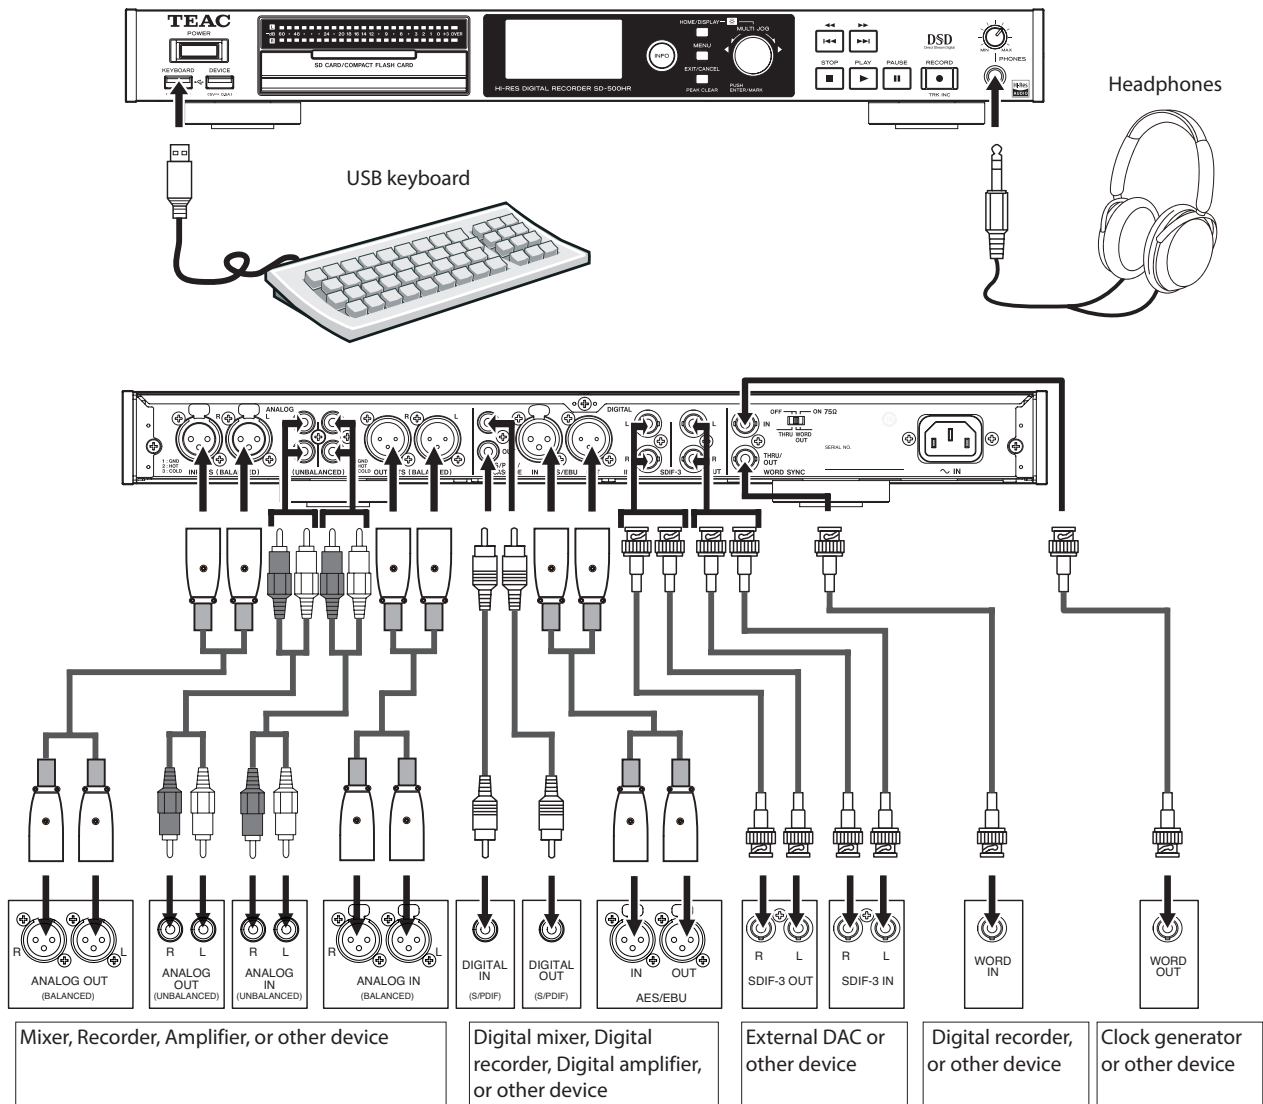

3 – Preparations


Preparing the remote control

Installing the battery


NOTE

At the time of purchase, this remote control comes with a lithium-ion coin battery (CR2025) installed. Before using the remote control, pull the isolation sheet out of the battery compartment.

1. Remove the battery holder.
While pressing ①, pull in direction ②.

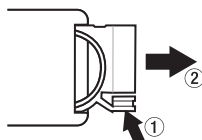

2. Install a coin-shaped lithium ion battery (CR2025) into the holder with the correct \oplus/\ominus orientation.

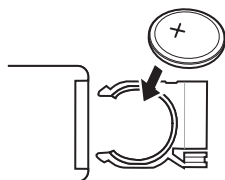

3. Reinsert the battery holder into the remote control.

When to change the battery

Replace the battery with a new one if the remote control operation range is reduced or if the buttons become unresponsive.

Use a coin-shaped lithium-ion battery (CR2025).

Warnings about battery use

The accidental swallowing of a battery by a small child is extremely dangerous. Keep batteries and remote controls out of reach of small children. Consult a physician immediately if a child should swallow a battery.


Misuse of a battery could cause it to leak, rupture or otherwise be damaged. Please read and abide by the cautions related to batteries. (See "CAUTIONS ABOUT BATTERIES" on page 2.)

- Install the coin-shaped lithium-ion battery with the correct orientation.
- Do not recharge the coin-shaped lithium-ion battery.
- Do not heat or disassemble the coin-shaped lithium-ion battery or put it into fire or water.
- Do not carry or store the coin-shaped lithium-ion battery with small metal objects. Doing so could short the battery and cause leakage or rupture, for example.
- When storing or disposing of batteries, cover the contacts with tape to prevent them from touching other batteries or metal objects.
- Follow the disposal instructions written on the battery or given by the local government when you are done using it.

Using the wireless remote control

Refer to page 12 for details about the functions of each button.

When using the remote control, point it at the remote control receiver on the unit within the angle shown below.

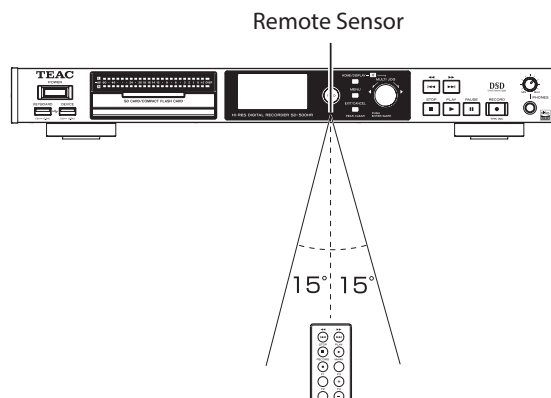

Operation distance

Directly in front: Within 7 meters

15° left or right: Within 7 meters

CAUTION

- Since the unit has a narrow vertical reception range, use the remote directly in front of the unit and at the same level as much as possible.
- The operation distance varies depending on the angle.
- If anything is between the remote control and the sensor, operation might not work.
- Remove the battery if you will not use the remote control for a long time (one month or more).
- If the battery should leak, thoroughly clean any residue from inside the battery compartment and install a new battery.
- When using other devices controlled by infrared rays, use of this remote control might operate these devices by mistake.

Turning the power on and off

Press the front panel **POWER** switch.



Startup Screen



Home Screen

After the unit starts up and the startup screen is shown, the Home Screen appears.

If no media is loaded in the current device, no track number or time will be shown on the Home Screen.

Turning the power OFF

Press the **POWER** switch to turn the power OFF.

No special shutdown procedures are necessary.

CAUTION

- Do not turn the power OFF when the unit is in use (recording, playing back, writing data to SD/CF/USB media, etc.). Doing so could cause recording to fail, recorded data to be damaged, sudden loud noise to be output from monitoring equipment, damage to equipment and harm to hearing.
- When the unit is turned ON for the first time after purchase, and also if the unit has been stored OFF for such a long time that the internal battery has discharged, the CLOCK ADJUST screen will appear immediately, so that the Time can be corrected.


Setting the date and time

The date and time are added to recorded files based on the unit's built-in clock.


- Press the **MENU** button repeatedly to open the **UTILITY** page, and turn the **MULTI JOG** dial to select **CLOCK ADJUST**.



- Press the **MULTI JOG** dial to open the **CLOCK ADJUST** screen.

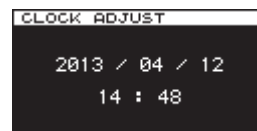

- Press the **MULTI JOG** dial again to enter setting mode. The cursor will appear at the item to be changed.

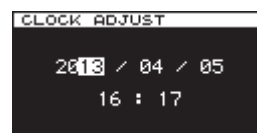

- Turn the **MULTI JOG** dial to change the value and then press it to confirm and move the cursor to the next item.
- After changing the year, month, date, hour and minute, the cursor disappears and the date and time setting ends.

NOTE

While setting the date and time, you can press the **EXIT/CANCEL (PEAK CLEAR)** button to cancel any changes and return to the menu screen.

- Press the **EXIT/CANCEL (PEAK CLEAR)** button to return to the menu screen.

Adjusting the brightness

While pressing and holding the **HOME/DISPLAY** button, turn the **MULTI JOG** dial to adjust the display and indicator brightness.



3 – Preparations

Inserting and ejecting SD and CF cards


Inserting SD and CF cards

Insert an SD card or CF card into the appropriate card slot on the front panel to use it for playback and recording.


NOTE

You can insert SD and CF cards regardless of whether the power is ON or OFF.


1. Pull the card slot door forward to open it.

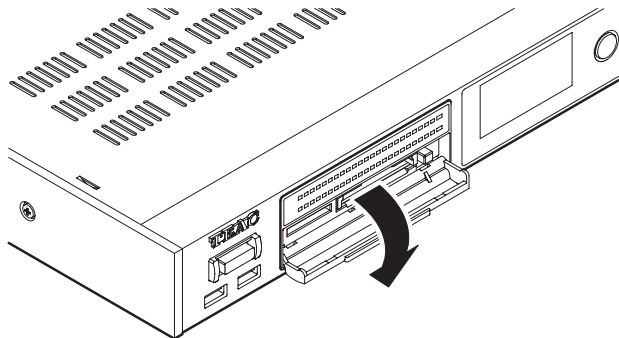

2. Insert the SD/CF card with the correct orientation. The label should be facing up and the contacts facing in.

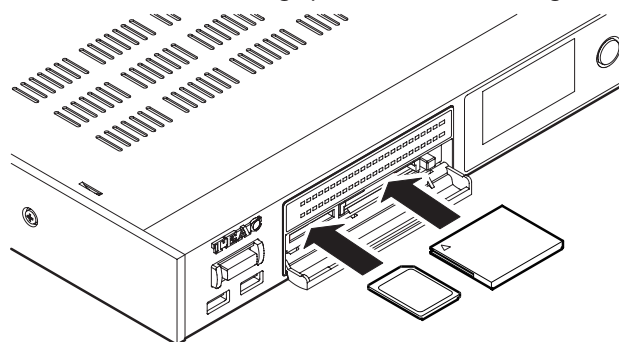

3. Close the card slot door.

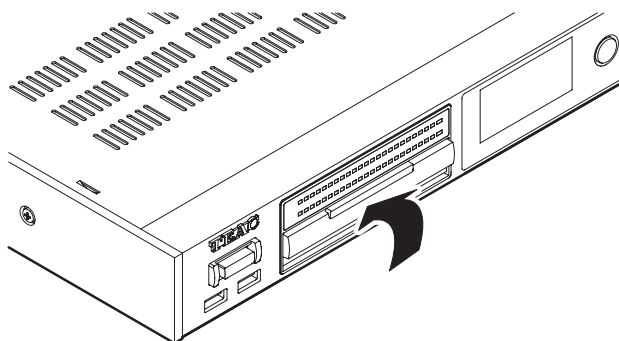

NOTE

If the SD/CF card slot door will not close, remove the card, and then insert it once again. To remove an SD card, pull it. To remove a CF card, pull it and press the square button located to the right of the slot.


Ejecting SD and CF cards

Turn the unit off or stop operation before ejecting an SD or CF card.

CAUTION

Never remove an SD or CF card when the unit is in use (recording, playing back, writing data to a card, etc.). Doing so could cause recording to fail, recorded data to be damaged, sudden loud noise to be output from monitoring equipment, damage to equipment and harm to hearing.


1. Pull the card slot door forward to open it.
2. To eject an SD card, press the SD card in slightly. To eject a CF card, press the square button located to the right of the CF card slot to eject the CF card partially.

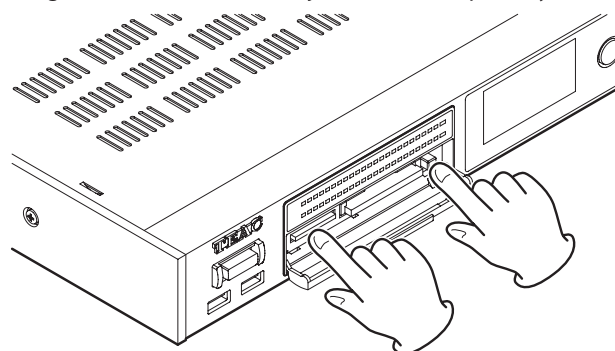

3. Pull the SD or CF card out the rest of the way.

SD card write protection

SD cards have write-protection switches.

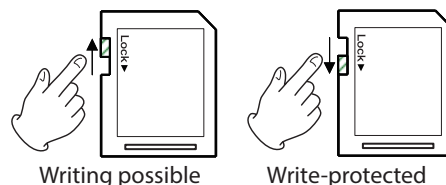

If the protection switch is slid into the "LOCK" position, adding and editing files will not be possible. To record, erase or otherwise change files, disable write protection.

CAUTION

If a protected SD card is loaded, the unit will check all of the audio files on it each time the device is changed. For this reason, changing devices takes time. Moreover, editing the playlist and other operations are not possible.

Connecting/disconnecting USB flash drives

Connecting USB flash drives

To use a USB flash drive with this unit for playback and dubbing, insert it into the **DEVICE** connector on the front of the unit.

NOTE

You can insert a USB flash drive anytime regardless of whether the power is ON or OFF.

Disconnecting USB flash drives

Turn the power OFF or stop operation before disconnecting a USB flash drive.

CAUTION

Never remove a USB flash drive when the unit is in use (recording, playing back, writing data to the drive, etc.). Doing so could cause recording to fail, recorded data to be damaged, sudden loud noise to be output from monitoring equipment, damage to equipment and harm to hearing.

Selecting the media used

Before starting to work with the unit, select the media that you want to use (SD card, CF card or USB flash drive).

To select the media used, follow these procedures.

1. Press the **MENU** button to open the GENERAL menu screen, and turn the **MULTI JOG** dial to select (highlight) MEDIA SEL.



2. Press the **MULTI JOG** dial to open the MEDIA SELECT screen.



3. Turn the **MULTI JOG** dial to select the media used, and press the **MULTI JOG** dial to confirm the selection.

NOTE

During selection, press the EXIT/CANCEL [PEAK CLEAR] button to cancel the selection and return to the menu screen.

4. The name of the currently selected media appears at the top right of the Home Screen.



- SD card selected
- CF card selected
- USB flash drive selected


Preparing SD/CF cards and USB flash drives

You must use this unit to format SD cards, CF cards and USB flash drives in order to make them usable by the unit.

CAUTION

- *Formatting will erase all data on an SD card, CF card or USB flash drive.*
- *Always format with this unit. If an SD card, CF card or USB flash drive is formatted by another device or a computer, it could affect operation of the unit.*


1. Use the **MENU** button and **MULTI JOG** dial to open the MEDIA SELECT screen and select the media to format. (See "Selecting the media used" on page 19.)
2. Press the **MENU** button to open the MEDIA menu, and turn the **MULTI JOG** dial to select FORMAT.

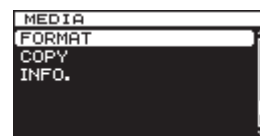

3. Press the **MULTI JOG** dial to open the format type selection pop-up.



4. Turn the **MULTI JOG** dial to select QUICK FORMAT or FULL FORMAT, and press the **MULTI JOG** dial. A confirmation pop-up message appears.

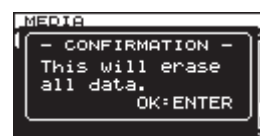

NOTE

To cancel formatting, press the EXIT/CANCEL [PEAK CLEAR] button.

5. Press the **MULTI JOG** dial to start formatting. While formatting, - QUICK FORMAT - or - FULL FORMAT - appears in a pop-up.



Pop-up when QUICK FORMAT selected

6. After formatting completes, the pop-up disappears and the menu reopens.

4 – Recording

This unit can record to SD and CF cards in the following formats.

PCM recording

WAV format (44.1/48/88.2/96/176.4/192kHz sampling frequency, 16/24-bit)

DSD recording

DSDIFF, DSF formats (2.8/5.6MHz sampling frequency)

The following explanations assume that you have loaded a recordable SD card or CF card, completed the necessary connections and turned the unit on.

NOTE

- The maximum numbers of folders and tracks that can be recorded by this unit on an SD card or CF card are as follows.

Maximum tracks: 999 tracks per folder

Maximum folders: 3000 per card

- When using media with a capacity of 2 GB or less, recording the maximum number of tracks or creating the maximum number of folders in the root folder as shown above might not be possible due to file system limitations. (The actual numbers depend on other conditions.)
- If a write-protected SD card is loaded in the unit, recording will not be possible. (See "SD card write protection" on page 18.)
- This unit cannot record directly to a USB flash drive due to system limitations. It can, however, format USB flash drives and write and erase data on them, for example. (See "Preparing SD/CF cards and USB flash drives" on page 19.) (See "5 – Folder and file operations (BROWSE screen)" on page 29.) (See "7 – Editing playlists" on page 39.)
- You can copy audio files between an SD card, a CF card and a USB flash drive. For details, see "Copying files between media (backing up)" on page 42.
- The largest file that this unit will create during record is 2GB. If a recording is about to exceed this size, a new file is automatically created, but the audio is processed so there is seamless continuity between the current and new file. On playback, in order to hear the audio seamlessly, please set the TRACK GAP mode setting to "GAPLESS". (See "Setting gapless playback mode" on page 38.)

Unexpected power interruptions

If an unexpected power interruption occurs when recording to an SD or CF card, the unit has a protection function that might prevent the complete loss of all track recording data. Data recorded up to about 25 seconds before the interruption occurs is saved.

CAUTION

- Even with this protection function, due to the characteristics of SD cards, CF cards and USB flash drives, if the unit is writing to the system area when the power is interrupted or the media is removed from the unit, all the files on the media could be damaged or lost. For this reason, you should try as much as possible to avoid power interruptions during recording and playback.
- This function was not created for the purpose of use with an external timer, for example, turning off the power.


Selecting the input source

Set the input source (recording source) to one of 6 types of input (balanced analog, unbalanced analog, PCM-SPDIF digital, PCM-AES/EBU digital, DSD-SDIF-3 digital, DSD-DSD-raw digital). Follow the procedures below to select the input source.


NOTE

- You cannot change the input source when recording.

1. Press the **MENU** button repeatedly to open the I/O SETTINGS menu, and turn the **MULTI JOG** dial to select INPUT SEL..

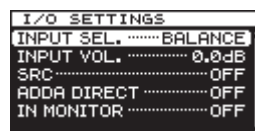

2. Press the **MULTI JOG** dial to open the INPUT SELECT screen.

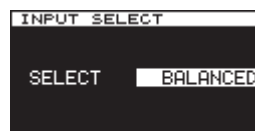

3. Turn the **MULTI JOG** dial to select the input source.
Options:
 - PCM recording: BALANCED (default), UNBALANCED, AES/EBU, SPDIF
 - DSD recording: BALANCED (default), UNBALANCED, SDIF-3, DSD-raw
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.


Showing the input source

Use the procedures in "Selecting the input source" above to check the current input source. The Home Screen does not have any input source indication.


Setting the recording file format

You can set the recording file format, as well as sampling rate.
For PCM recording, you can set the format to WAV-16 or WAV-24.
For DSD recording, you can set it to DSDIFF or DSF.
When stopped, use the menu to set the file format.

1. Press the **MENU** button repeatedly to open the **REC FILE** menu, and turn the **MULTI JOG** dial to select **FILE**.

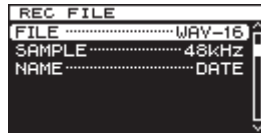

2. Press the **MULTI JOG** dial to open the **FILE TYPE** screen.

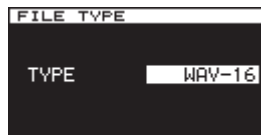

3. Turn the **MULTI JOG** dial to set the recording file format.
Options:
 - PCM recording: WAV-16(16-bit, Default value), WAV-24(24-bit)
 - DSD recording: DSDIFF, DSF
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.
5. Turn the **MULTI JOG** dial to select **SAMPLE**.




6. Press the **MULTI JOG** dial to open the **SAMPLING RATE** screen.



7. Turn the **MULTI JOG** dial to set the sampling rate.
Options:
 - PCM recording: 44.1kHz, 48kHz (default), 88.2kHz, 96kHz, 176.4kHz, 192kHz
 - DSD recording: 2.8MHz, 5.6MHz
8. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.
9. Turn the **MULTI JOG** dial to select **CHANNEL**.



10. Press the **MULTI JOG** dial to open the **CHANNEL** screen.

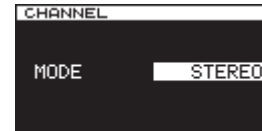


11. Turn the **MULTI JOG** dial to set the Recorded file's channel type (Stereo File or Dual Mono File).
Options: STEREO (default), MONOx2
12. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

Using the sampling rate converter

Since this unit has a built-in sampling rate converter, you can record at a sampling frequency that is different from the sampling frequency of the digital input source.
Use the menu to turn the sampling rate converter (SRC) ON/OFF.

1. Press the **MENU** button repeatedly to open the **I/O SETTINGS** menu, and turn the **MULTI JOG** dial to select **SRC**.

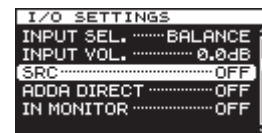

2. Press the **MULTI JOG** dial to open the **SRC** screen.



3. Turn the **MULTI JOG** dial to turn the sampling rate converter on or off.
Options: OFF (default), ON
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

- If you try to record when the digital signal input through the **DIGITAL IN** connector has a sampling frequency that is different from that set on the **SAMPLING RATE** screen and the sampling rate converter (SRC) is off, a "-- DIN ERROR -- Digital input is illegal." pop-up message will appear. (See "Setting the recording file format" on page 21.)
- The sampling rate converter (SRC) will not operate on SDIF-3/DSD-raw input.
- The sampling rate converter can accept incoming data at rates of 32kHz to 192kHz.

4 – Recording

Monitoring the input signal

Input signal monitoring is usually only on during recording and when in recording standby. You can, however, also enable input monitoring when the unit is stopped.

When Input signal monitoring is turned ON, playback is not possible but Recording can be performed. In order to listen to previously recorded audio, please turn the Input monitor OFF. Follow the procedures below to make this setting.

1. Press the **MENU** button repeatedly to open the I/O SETTINGS menu, and turn the **MULTI JOG** dial to select IN MONITOR.



2. Press the **MULTI JOG** dial to open the INPUT MONITOR screen.



3. Turn the **MULTI JOG** dial to turn input monitoring on or off. Options: OFF (default), ON
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

Monitoring cannot be turned on during playback or when paused.


Adjusting the input signal level

You can use the menu to adjust the level of the input signal.

1. Press the **MENU** button repeatedly to open the I/O SETTINGS menu, and turn the **MULTI JOG** dial to select INPUT VOL..



2. Press the **MULTI JOG** dial to open the INPUT VOLUME screen.

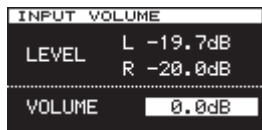

NOTE

The LEVEL item shows the input levels.

3. Turn the **MULTI JOG** dial to adjust the VOLUME item, which is the input signal level.
Options: MUTE, -60dB – +12dB (default: 0.0dB)

CAUTION

The level meter OVER indicators will light at the following levels. If the DSD mode is set to +3, though, they will light at +3dB and higher.

- PCM recording and playback: 16-bit full-scale
- DSD recording and playback: 0dB

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

The input signal level setting is retained even when the unit is off.


Setting the peak hold indicators

You can set how long the peak hold indicators appear on the level meters.

1. Press the **MENU** button repeatedly to open the UTILITY menu, and turn the **MULTI JOG** dial to select PEAK HOLD.



2. Press the **MULTI JOG** dial to open the PEAK HOLD screen.

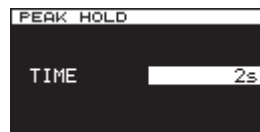

3. Turn the **MULTI JOG** dial to set how long the peak hold indicators appear.
Options:

“OFF”: No Peak Hold indicators are shown.

“1s” - “10s”: The peak hold indicator will remain shown for the selected number of seconds. (default: “2s”)

“INF”: Peak Hold indicators are shown until the **EXIT/ CANCEL [PEAK CLEAR]** button is pushed.

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

Setting the master clock

You can set the master clock used by this unit.


CAUTION

When multiple digital audio devices are connected in the same system, make certain that they all use the same master clock.

1. Press the **MENU** button to open the **GENERAL** menu, and turn the **MULTI JOG** dial to select **CLOCK MSTR**.




2. Press the **MULTI JOG** dial to open the **CLOCK** screen.

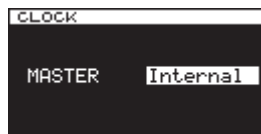

3. Turn the **MULTI JOG** dial to select the master clock.
Options:
 - Internal (default): Use the unit's built-in master clock.
 - WORD: Use the clock signal input through the **WORD SYNC IN** connector as the master clock.
 - DIN (DIGITAL IN): Use the clock signal of the currently selected digital audio input source as the master clock.
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

- If a "CLOCK LOST..." pop-up error message appears, press the **EXIT/CANCEL [PEAK CLEAR]** button to return to the Menu Screen, and change the master clock setting.
- If the unit cannot lock to the set master clock, it will automatically switch to the internal clock and a star (*) will appear at the end of the selected setting.

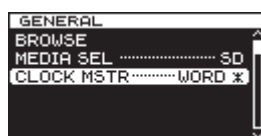

- When using **WORD CLOCK** and recording in **DSD** format, please use a 44.1kHz signal.

Using this unit as an AD/DA converter


This unit can also be used as an AD/DA converter when connected to another recorder or DAW, for example.

To use this unit as an AD/DA converter, set **ADDA DIRECT** mode to **ON**. When **ON**, the **INPUT SELECT** screen setting does not function, and setting the input selection for the analog and digital inputs separately is necessary. In addition, when **ADDA DIRECT** mode is **ON**, playback is not possible, but recording the analog input signal is possible. To play back a recording, set **ADDA DIRECT** mode to **OFF**.

1. Press the **MENU** button repeatedly to open the **I/O SETTINGS** menu, and turn the **MULTI JOG** dial to select **ADDA DIRECT**.



2. Press the **MULTI JOG** dial to open the **ADDA DIRECT** screen.

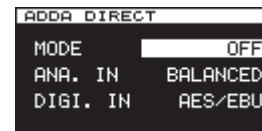

3. Turn the **MULTI JOG** dial to turn AD/DA DIRECT **ON** or **OFF**.
Options: **OFF** (default), **ON**
4. Press the **MULTI JOG** dial to confirm the setting.
The cursor will move to the **ANA. IN** setting.
5. Turn the **MULTI JOG** dial to select the **ANA. IN**.
Options:
 - BALANCED** (default): balanced XLR input jacks
 - UNBALANCED**: unbalanced RCA input jacks
6. Press the **MULTI JOG** dial to confirm the setting.
The cursor will move to the **DIGI. IN** setting.
7. Turn the **MULTI JOG** dial to select the **DIGI. IN**.
Options:
 - For **PCM** recording: **AES/EBU**, **SPDIF**
 - For **DSD** recording: **SDIF-3**, **DSD-raw**

NOTE

*The selected options will change automatically according to the recording file format selected on the **FILE TYPE** screen. (See "Setting the recording file format" on page 21.)*

8. Press the **MULTI JOG** dial to confirm the setting and return to the menu screen.

CAUTION

*When **ADDA Direct Mode** is **ON**, the input signal level setting will only affect the Analog Input.*

4 – Recording

Basic recording operations

You can begin recording after you have finished making the settings described previously, including input source selection, recording file format, sampling rate converter activation and input level adjustment.

To start recording standby from a stopped state:

Press the front panel or remote control **RECORD** button to put the unit in recording standby (The **RECORD [TRK INC]** and **PAUSE** buttons on the main unit light).

To start recording from recording standby:

Press the front panel or remote control **PLAY** button.

To switch from recording to recording standby:

Press the main unit **PAUSE** button or the remote control **F1** button.

To stop recording:

Press the front panel or remote control **STOP** button. When the unit stops recording, the recorded data will be written and an audio file will be created.

NOTE

- On the **FILE NAME** screen, you can set the format of the names automatically given to audio files when they are created. (See "Setting the file name format" on page 27.)
- The maximum file size for each track is 2 GB.
- Recorded tracks will be created in the current folder. (See "Folder operations" on page 30.)

CAUTION

While the recording is being written to the current media, "WRITING FILE ..." will appear the display. While this message is shown, do not move the unit, turn off the power or remove the current media. The recorded content cannot be saved correctly if writing is interrupted.


Sync recording

If the sync recording function is on, recording will begin automatically when the input signal exceeds the level set in advance (SYNC REC LEVEL).


Activating and setting sync recording

Use the menu to turn the sync recording function on and off and to set the sync recording level.

1. Press the **MENU** button repeatedly to open the **REC FUNC** menu, and turn the **MULTI JOG** dial to select **SYNC REC**.

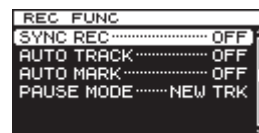

2. Press the **MULTI JOG** dial to open the **SYNC REC** screen.

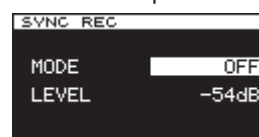

3. Turn the **MULTI JOG** dial to turn the sync recording function on or off.
Options: OFF (default), ON
4. Press the **MULTI JOG** dial to confirm the setting.
If set to ON, the cursor will move to the **LEVEL** item.
If set to OFF, the **REC FUNC** menu screen will reopen.
5. Turn the **MULTI JOG** dial to select the sync level.
Options: -24dB, -30dB, -36dB, -42dB, -48dB, -54dB (default), -60dB, -66dB, -72dB
6. Press the **MULTI JOG** dial to confirm the setting and return to the menu screen.


NOTE

- After recording starts, if the signal stays below the sync level continuously for 5 seconds, the unit automatically enters recording standby.
- Sync recording starts as soon as the level is detected.

Sync recording operation

When the sync recording function is on and the unit is in recording standby, recording will automatically start or stop in response to the level of the input source.


- When a signal higher than the sync level is input, recording will begin automatically. Recording will automatically stop when the signal stays below the sync level continuously for 5 seconds. However, recording will not begin even if input is detected unless there has been at least one second in which the signal was below the SYNC LEVEL after entering recording standby.

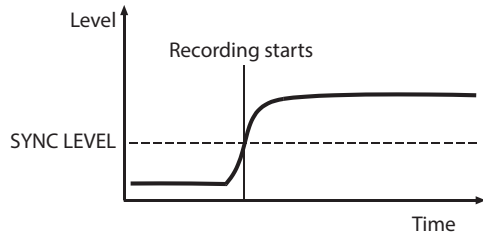

- To stop sync recording, set the SYNC REC screen MODE item to OFF.


If the sync level is too high

If the sync level setting is too high, the beginning of a song that starts with a low volume might not be captured.

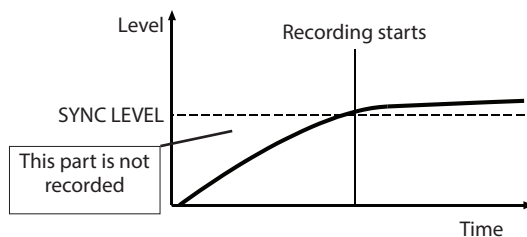

If the sync level is too low

Sync recording will not begin from recording standby if the source you are recording has a background noise level that is higher than the sync level.

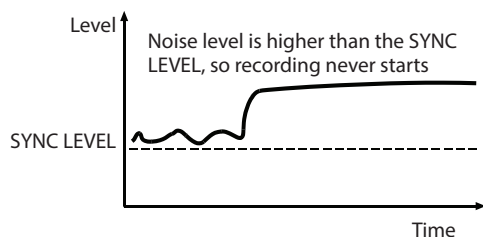


Creating new higher-numbered tracks automatically


When using the Auto Track function during recording, the unit automatically creates a new track with a higher number when a set condition is met.

Use the menu to enable the Auto Track function and set its mode.

- Press the **MENU** button repeatedly to open the REC FUNC menu, and turn the **MULTI JOG** dial to select AUTO TRACK.

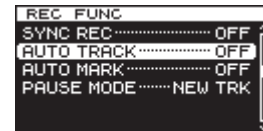

- Press the **MULTI JOG** dial to open the AUTO TRACK screen.

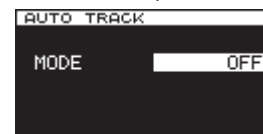


- Turn the **MULTI JOG** dial to set the auto track function mode. Options:
OFF (default)

New tracks will not be created automatically.

LEVEL

A new track with a higher number will be created when the signal exceeds the auto track level (AUTO TRACK screen LEVEL item value) after having stayed below it for at least two seconds.

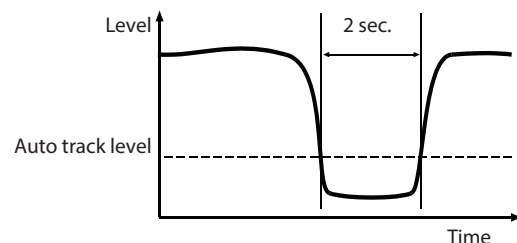

DD

When recording a digital source (CD, DAT or MD) via a **DIGITAL IN** jack, a new track will be created when a track division is detected in the source. However, when recording an analog source or a digital source other than the types listed above, this will work in the same way as LEVEL mode, and new tracks will be created in response to the input level.

DD mode does not function, however, when SRC is on if the digital source is DAT.

TIME

A new track with a higher number will be created at the set time interval (AUTO TRACK screen TIME item value).


SIZE

A new track with a higher number will be created when the set size is reached (AUTO TRACK screen SIZE item value).

NOTE

If you choose the LEVEL, TIME or SIZE option, the parameter to be set appears beneath the MODE item.

4 – Recording

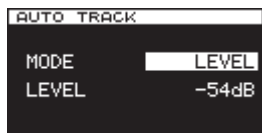

4. Press the **MULTI JOG** dial to confirm the setting. The cursor will move to the **LEVEL** item.
5. Turn the **MULTI JOG** dial to set the parameter value.
LEVEL (level mode)
Options: -24dB, -30dB, -36dB, 42dB, -48dB, -54dB (default), -60dB, -66dB, -72dB
DD (digital direct mode)
Options: No options
TIME (time mode)
Options: 1min, 2min, 3min, 4min, 5min, 6min (default), 7min, 8min, 9min, 10min, 15min, 30min, 1hour, 2hour
SIZE (size mode)
Options: 640MB, 1GB, 2GB (default)
6. Press the **MULTI JOG** dial to confirm the setting and return to the menu screen.

Creating a higher numbered track manually

When recording, press the front panel or remote control **RECORD** button to create a new track (with a higher number) without interrupting recording. You cannot, however, create a track of 4 seconds or less.

NOTE

You can also divide a track after recording using the editing function. (See "Dividing files" on page 34.)


Setting the automatic mark function

By turning the **AUTO MARK** options ON, marks can be added automatically whenever the **OVER** indicator lights or an external clock synchronization error occurs. Use of this function allows you to quickly find and check problems that occurred in the system during recording.

1. Press the **MENU** button repeatedly to open the **REC FUNC** menu, and turn the **MULTI JOG** dial to select **AUTO MARK**.



2. Press the **MULTI JOG** dial to open the **AUTO MARK** screen.

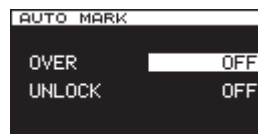

3. Turn the **MULTI JOG** dial to select the **OVER** item. (When **OVER** is ON, a mark is added automatically whenever an **OVER** level meter indicator lights.)
Options: OFF (default), ON
4. Press the **MULTI JOG** dial to confirm the setting. The cursor moves to the **UNLOCK** item.
5. Turn the **MULTI JOG** dial to select **UNLOCK**. (When ON, marks will be added when the unit unlocks from the external clock.)
Options: OFF (default), ON
6. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

- When an **OVER** occurs, the Mark name is "OVERxxx" *.
- When an **UNLOCK** even occurs, the Mark name is "UNLKxxx" *.
* "xxx" is a number that increments through all MARKs in this track.

Adding marks manually during recording

You can add marks at the positions you want while recording and use those marks to change positions quickly during track playback.

NOTE

During recording, adding marks is possible, but moving to and deleting those marks is not possible. Moving to and deleting marks is only possible when the track is stopped, in playback standby or playing back. (See “Locating to marks” on page 37.) (See “Deleting marks” on page 37.)

Adding marks when recording

During track recording, press the **MULTI JOG** dial (or remote control **MARK** button) at any point where you want to add a mark.

NOTE

- A maximum of 99 marks can be added to each track. Mark information is stored in the track file.
- You can also add marks during track playback. (See “Adding marks manually during playback” on page 37.)
- When adding a mark manually, the Mark Name “MARKxxx” * is used.
* “xxx” is a number that increments through all MARKs in this track.


Setting the pause mode

You can set whether or not a new track with a higher number is created when switching from recording to recording standby

1. Press the **MENU** button repeatedly to open the **REC FUNC** menu, and turn the **MULTI JOG** dial to select **PAUSE MODE**.



2. Press the **MULTI JOG** dial to open the **PAUSE MODE** screen.

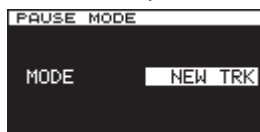

3. Turn the **MULTI JOG** dial to set the pause mode.
Options:
NEW TRK (default) New track with higher number created when switching from recording to recording standby
SAME TRK No new track created when switching from recording to recording standby
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.


Setting the file name format

You can specify the type of file name that is automatically given to files when recorded.


1. Press the **MENU** button to open the **REC FILE** menu, and turn the **MULTI JOG** dial to select **NAME**.



2. Press the **MULTI JOG** dial to open the **FILE NAME** screen.

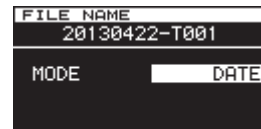

3. Turn the **MULTI JOG** dial to set the file name format.
Options:
DATE (default) The date and time of the built-in clock will become the file name.
USER1 – USER3 The file will be named according to eight characters set by the user.
4. Press the **MULTI JOG** dial to return to the menu screen after selecting **DATE** or after selecting **USER1 – USER3** if you do not want to change the file name given.
After selecting **USER1 – USER3**, if you want to change the file name given, press the **▶▶ [▶▶]** button to open the **RENAME** screen.

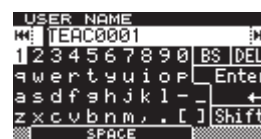

5. Edit the file name. See “Inputting and editing characters” on page 28 for details about how to edit a file name.
6. When you are done setting the file name, turn the **MULTI JOG** dial to select **Enter**. Then, press the **MULTI JOG** dial to confirm the changes to the characters and return to the **FILE NAME** screen.
7. Press the **MULTI JOG** dial again to return to the menu screen.

4 – Recording

Inputting and editing characters

Use the following operations to edit characters.

To move the cursor (editing position):

Use the ◀◀ [◀◀]/▶▶ [▶▶] buttons on the main unit.

To change the character at the cursor position:

Turn the **MULTI JOG** dial.

To insert a space:

Turn the **MULTI JOG** dial to select SPACE, and press the **MULTI JOG** dial.

To delete a character:

Turn the **MULTI JOG** dial to select DEL (when you want to delete a character after the cursor) or BS (when you want to delete a character before the cursor), and press the **MULTI JOG** dial.

To delete all characters after the cursor position:

Turn the **MULTI JOG** dial to select DEL, and press and hold the **MULTI JOG** dial.

To delete all characters before the cursor position:

Turn the **MULTI JOG** dial to select BS, and press and hold the **MULTI JOG** dial.

To switch between uppercase and lowercase:

Turn the **MULTI JOG** dial to select Shift, and press the **MULTI JOG** dial.

This also switches between numbers and symbols at the same time.

To cancel editing:

Press the **EXIT/CANCEL [PEAK CLEAR]** button.

CAUTION

- You can also directly access SD and CF cards from a computer to change the names of files, but doing so could change the playback order of the files.
- Names that contain characters other than letters of the alphabet, numbers and symbols cannot be edited. (Such names cannot be shown on the **RENAME** screen.)
- The following symbols and punctuation marks cannot be used in names.

¥ \ / ; : , * ? " < > |

NOTE

You can also use a USB keyboard to edit text. (See “Using a keyboard to input text” on page 44.)

Media capacities and recording times

This table shows maximum total recording times for different media capacities and file formats.

Recording mode settings			SD/CF card (per GB)
PCM	WAV-16	44.1 kHz	90 min.
		48 kHz	85 min.
		88.2 kHz	45 min.
		96 kHz	42 min.
		176.4 kHz	22 min.
	WAV-24	192 kHz	21 min.
		44.1 kHz	60 min.
		48 kHz	55 min.
		88.2 kHz	30 min.
		96 kHz	25 min.
DSD	DSDIFF	176.4 kHz	15 min.
		192 kHz	13 min.
	DSF	2.8 MHz	22 min.
		5.6 MHz	11 min.

5 – Folder and file operations (BROWSE screen)

This unit manages audio files on SD cards, CF cards and USB flash drives in a folder structure.

You can select the folder or file that you want to work with on the BROWSE screen and open file or folder menu pop-up.

In these menus, you can create folders, delete folders and files, change their names and add files to playlists, for example.

Moreover, you can also move and copy folders and files between folders using a direct operation from the BROWSE screen.

TIP

- *By using a card reader or other interface to read files on SD/CF/USB media from a computer, you will be able to use your computer to modify the folder structure, edit folder and file names, and delete folders and files.*
- *If you perform this type of editing from your computer, be aware that the playback order of the files on the unit may have changed.*


Opening the BROWSE screen

The following operation example assumes that an SD card has been loaded and selected as the current media.

1. Press the **MENU** button to open the GENERAL page of the menu screen, and turn the **MULTI JOG** dial to select BROWSE.



2. Press the **MULTI JOG** dial to open the BROWSE screen.

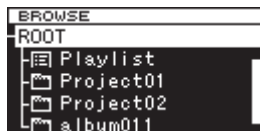

NOTE

During selection, press the EXIT/CANCEL [PEAK CLEAR] button to cancel the selection and return to the menu screen.

BROWSE screen navigation

Folders and music files appear on the BROWSE screen in a hierarchical structure much as they would appear on a computer.

When the BROWSE screen is open, use the main unit **MULTI JOG** dial or ◀◀ [I◀◀]/▶▶ [▶▶I] buttons (or or remote control **F3/F4** or ◀◀ [I◀◀]/▶▶ [▶▶I] buttons) to select folders and files that you want to work with.

- Press the **MULTI JOG** dial to open the folder or file menu pop-up. (See “Folder operations” on page 30.) (See “File operations” on page 30.)
- Press the **EXIT/CANCEL [PEAK CLEAR]** button to move up one level in the file structure. When using the folder or file menu, press this to go back one step.
- Turn the **MULTI JOG** dial, or use the remote control **F3/F4** buttons to select a subfolder or file inside the same folder.
- When a folder or a file is selected, press the main unit or remote control ◀◀ [I◀◀] button to move up a level in the file structure, or press the ▶▶ [▶▶I] button to move down a level.
When a folder is selected, you can press the **MULTI JOG** dial to change levels even when the folder menu pop-up **SELECT** item is selected. When the top line on the BROWSE screen is selected, press the **MULTI JOG** dial to move up one level. When any other line is selected press the **MULTI JOG** dial to move down one level.
- When a folder or file is selected, press the main unit **HOME/DISPLAY** button (or remote control **F1** button) to return to the Home Screen.
- When a folder or a file is selected, press the main unit or remote control **PLAY** button to return to the Home Screen and start playback of the selected folder or file.
- When a folder or a file is selected, press the **PAUSE** button to return to the Home Screen and put the unit into a playback pause state at the beginning of that folder or file.

Icons on the BROWSE screen

The meanings of icons that appear on the BROWSE screen are as follows.

Playlist (📁)

The playlist 📁 icon is followed by the playlist name. (See “Opening the playlist screen” on page 39.)

Folder (📁)

The folder 📁 icon is followed by the folder name.

Audio file (🎵)

The audio file 🎵 icon is followed by the audio file name.

NOTE

The current folder does not have a special icon. The current folder always appears at the top of the BROWSE screen.

5 – Folder and file operations (BROWSE screen)

Folder operations

Select the desired folder on the BROWSE screen and press the **MULTI JOG** dial to open the folder menu pop-up.



Turn the **MULTI JOG** dial to select the item that you want, and press the **MULTI JOG** dial to execute the operation.

NOTE

When a protected SD card is loaded, the RENAME, DELETE, ADD P.L. and CREATE items cannot be used. (See “SD card write protection” on page 18.)

SELECT

Open the selected folder.

NOTE

When a folder is selected, you can also press the main unit or remote control ►► [►►I] button to open a folder.

RENAME

Open the RENAME screen where you can edit the name of the selected folder. (See “Editing folder and file names” on page 31.)

DELETE

Delete the selected folder. (See “Deleting folders and files” on page 31.)

MOVE/COPY

Move/copy the selected subfolder to a different folder. (See “Moving and copying folders and files” on page 32.)

ADD P.L.

Register all the files in the selected folder in the desired playlist. (See “Registering folders and files in a playlist” on page 32.)

INFO

Show information (total number of files, total time/size and last change date) about the selected folder in a pop-up. (See “Viewing folder and file information” on page 33.)

CREATE

Creates a new folder. (See “Creating new folders” on page 33.)

CANCEL

Do not conduct any operation on the selected folder, and close the folder menu.

File operations

Select the desired file on the BROWSE screen and press the **MULTI JOG** dial to open the file menu pop-up.



Turn the **MULTI JOG** dial to select the item that you want, and press the **MULTI JOG** dial to execute the operation.

NOTE

When a protected SD card is loaded, the RENAME, DELETE, ADD P.L. and MOVE/COPY items cannot be used. (See “SD card write protection” on page 18.)

SELECT

Open the selected file, and return to the Home Screen.

RENAME

Open the RENAME screen where you can edit the name of the selected file. (See “Editing folder and file names” on page 31.)

DELETE

Delete the selected file. (See “Deleting folders and files” on page 31.)

MOVE/COPY

Move the selected file to a different position in the same folder, or move/copy it to a different folder. (See “Moving and copying folders and files” on page 32.)

ADD P.L.

Add the selected file to the desired playlist. (See “Registering folders and files in a playlist” on page 32.)

INFO

Show information about the selected file. (See “Viewing folder and file information” on page 33.)

File information is shown on two pages. Press the **MULTI JOG** dial to open the second page.

1st page: Total track time/file size

File format

Sampling frequency

2nd page: Creation date

DIVIDE

Divide the selected file into two files. (See “Dividing files” on page 34.)

UNDO

Immediately after dividing a file, you can undo the operation, restoring files to their previous state. (See “Undoing file division (UNDO/REDO)” on page 35.)

REDO

This option appears only immediately after undoing a file division. Use it to execute the same division again, restoring the files to the state before the undo operation. (See “Undoing file division (UNDO/REDO)” on page 35.)

CANCEL

Do not conduct any operation on the selected file, and close the file menu.

5 – Folder and file operations (BROWSE screen)

Editing folder and file names

1. Select the folder or file with the name that you want to edit, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select RENAME.



Folder menu

File menu

3. Press the **MULTI JOG** dial to open the RENAME screen.



4. Edit the name of the folder or file.
For details about editing folder and file names, see "Inputting and editing characters" on page 28.
5. When you are done editing the folder or file name, turn the **MULTI JOG** dial to select Enter, and press the **MULTI JOG** dial to confirm the name change.
"RENAMING..." appears in a pop-up, and the folder or file name is changed.



After the folder or file name is changed, the BROWSE screen reopens.


CAUTION

- You can also directly access SD/CF/USB media from a computer to change the names of files, but doing so could change the previous playback order of the files.
- Names that contain characters other than the letters of the alphabet, numbers and symbols cannot be edited (the name will not appear when the RENAME function is being used).
- The following symbols and punctuation marks cannot be used in names.

¥ \ / ; : , * ? " < > |

NOTE

In addition to using the BROWSE screen to select a folder or file to change its name, you can also use the RENAME item on the TRACK EDIT page of the menu screen to edit the name of the selected folder or file.

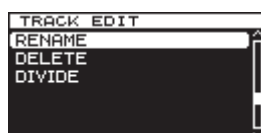

Deleting folders and files

You can delete folders and files from SD cards, CF cards and USB flash drives.

If you delete a folder, all the files in it will also be deleted.


1. Select the folder or file that you want to delete, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select DELETE.



Folder menu

File menu

3. Press the **MULTI JOG** dial.
A confirmation pop-up message appears.

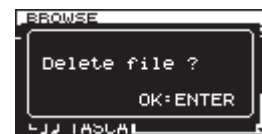

NOTE

Press the EXIT/CANCEL [PEAK CLEAR] button to cancel deletion.


4. Press the **MULTI JOG** dial again to delete the selected folder or file from the SD card, CF card or USB flash drive.
While the folder or file is being deleted, "DELETING FILE..." appears in a pop-up.



After deletion completes, the BROWSE screen reopens.

NOTE

In addition to using the BROWSE screen to select a folder or file to delete, you can also use the DELETE item on the TRACK EDIT page of the menu screen to delete the selected folder or file.

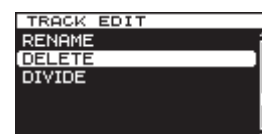

5 – Folder and file operations (BROWSE screen)

Moving and copying folders and files


1. Select the folder or file that you want to move or copy, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select **MOVE/COPY**.



Folder menu

File menu

3. Press the **MULTI JOG** dial.
The name of the folder or file that will be moved or copied blinks on the BROWSE screen.
4. Use the **MULTI JOG** dial to open the destination folder for the item to be moved or copied on the BROWSE screen. To move to a location at a higher level in the folder structure, choose the higher folder (at the top of the list).
If you move the cursor to a place where folder and file names are shown, the name of the folder or file that will be moved or copied blinks.
5. Press the **MULTI JOG** dial to open the **MOVE OR COPY** selection pop-up.

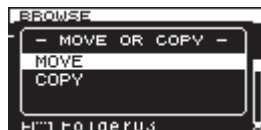

NOTE

*If the destination is in the same folder as the sub folder or file selected, copying is not possible so the **MOVE OR COPY** pop-up will not appear. Only moving is possible within the same folder.*

6. Select **MOVE** to move the folder or file from its previous location. Select **COPY** to copy the folder or file. Then, press the **MULTI JOG** dial to confirm the move or copy operation. Depending on the selected item, "MOVING..." or "COPYING..." appears in a pop-up, and the folder or file is moved or copied.



After selecting MOVE



After selecting COPY

After moving or copying completes, the BROWSE screen reopens.

NOTE

*After using **MOVE**, the moved folder or file will not remain in its original folder location.*

*After using **COPY**, the copied folder or file will also remain in its original folder location.*

Registering folders and files in a playlist

You can add folders and files to the playlist that you want.

1. Select the folder or file that you want to add to the playlist, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select **ADD P.L.**.



Folder menu

File menu

3. Press the **MULTI JOG** dial to add the folder or file to the current playlist, and return to the BROWSE screen.

NOTE

- If you select a folder, all the files in the folder will be added to the playlist. Files in subfolders, however, will not be added.
- A maximum of 100 tracks can be added to a playlist.
- If you attempt to add more than 100 tracks, a **P.LIST FULL** warning message pop-up will appear, and the track(s) will not be added.
- The files will be inserted at the end of the current playlist*.

**Current playlist: This will be "Playlist001" if the media is new. If other playlists have been created, the last opened playlist will be the current playlist. For details, see "Opening the playlist screen" on page 39.*

5 – Folder and file operations (BROWSE screen)

Viewing folder and file information

You can view folder and file information.

1. Select the folder or file that you want to check, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select **INFO**.



Folder menu




File menu

3. Press the **MULTI JOG** dial to open the folder or file information pop-up.
File information is shown on two pages. Press the **MULTI JOG** dial again to switch to the second information page.



Folder menu

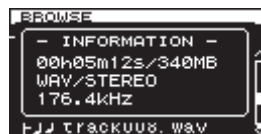

File menu


4. After checking the information, press the **MULTI JOG** dial or **EXIT/CANCEL [PEAK CLEAR]** button to return to the BROWSE screen.

Creating new folders


1. Select the folder where you want to create a new subfolder, and press the **MULTI JOG** dial to open the folder menu pop-up.
2. Turn the **MULTI JOG** dial to select **CREATE**.



3. Press the **MULTI JOG** dial to open the CREATE screen.

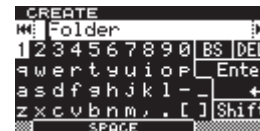

4. Input the folder name. For details about how to input a folder name, see "Inputting and editing characters" on page 28.
5. After inputting the folder name, turn the **MULTI JOG** dial to select **Enter**, and press the **MULTI JOG** dial to confirm the name.
A confirmation pop-up message appears.

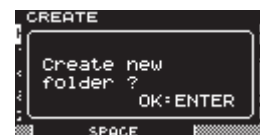

NOTE

To cancel the creation of a folder, press the **EXIT/CANCEL [PEAK CLEAR]** button.

6. Press the **MULTI JOG** dial to create the new folder.
"CREATING..." appears in a pop-up, and the new folder is created.



After the new folder is created, the BROWSE screen reopens.

NOTE

- The maximum number of folders that can be created on a single SD card, CF card or USB flash drive is 3000.
- When using media with a capacity of 2 GB or less, creating the maximum number of folders in the root folder as shown above might not be possible due to file system limitations. (The exact number depends on use conditions.)

5 – Folder and file operations (BROWSE screen)


Dividing files

You can divide a file into two files at any position you like.

1. Select the file that you want to divide, and press the **MULTI JOG** dial to open the file menu pop-up.
2. Turn the **MULTI JOG** dial to select **DIVIDE**.



3. Press the **MULTI JOG** dial to open the **DIVIDE** screen.

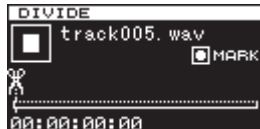

4. Use the following controls to set the **DIVIDE** point.
Press the **PLAY** button to play the file
Press the **STOP** button to stop playback
Press and hold the **◀◀ [I◀◀] / ▶▶ [▶▶I]** button to search
Turn the **MULTI JOG** dial to move between mark positions




5. After finding the approximate position where you want to divide the file using the above operations, press the **PAUSE** button to enter scrub playback mode.



In scrub playback mode, you can turn the **MULTI JOG** dial to move 20 msec at a time.

6. After confirming the division point, press the **MULTI JOG** dial. A confirmation pop-up message appears.

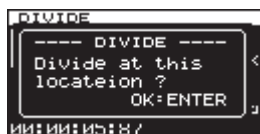

NOTE

To cancel the division of a file, press the **EXIT/CANCEL [PEAK CLEAR]** button.

7. Press the **MULTI JOG** dial to divide the file.
"DIVIDING..." appears in a pop-up, and the file is divided.



After dividing completes, the **BROWSE** screen reopens.

NOTE

- When stopped, you can press the **EXIT/CANCEL [PEAK CLEAR]** button to return to the **BROWSE** screen without dividing.
- You cannot move to the beginning or end of a track by using the **◀◀ [I◀◀] / ▶▶ [▶▶I]** buttons. You can only make fine adjustments with the **MULTI JOG** dial when in scrub playback mode. By pressing and holding the **◀◀ [I◀◀] / ▶▶ [▶▶I]** buttons, you can move the division point continuously.
- After dividing a file, two new files with "_a" and "_b" added to the end of the original file name are created.

Example:

File name before division

TEAC_0000.wav

File names after division

TEAC_0000_a.wav (part before division point)

TEAC_0000_b.wav (part after division point)

- In addition to using the **BROWSE** screen to select a file for division, you can also use the **DIVIDE** item on the **TRACK EDIT** page of the menu screen to divide the selected file.

CAUTION

- Division is not possible if the full file path and file name would have a total of more than 255 characters.
- If the name of a file after division would be the same as that of an existing file, division is not possible and a "- CANNOT DIVIDE - Duplicate name error." pop-up message will appear.

TIP

- You can add a mark during recording at a position where you want to divide a file. (See "Adding marks when recording" on page 27.)

5 – Folder and file operations (BROWSE screen)

Undoing file division (UNDO/REDO)


This function can only be used after dividing a file.

Immediately after dividing a file, you can undo the operation, restoring the file to its previous state.


Immediately after undoing a file division, the UNDO option becomes REDO. Use it to execute the same division again, restoring the files to the state before the undo operation. (The division point setting will be the same as when the DIVIDE operation was first conducted.)

UNDO and REDO options only appear after a file has been divided.

1. Select the file that was divided, and press the **MULTI JOG** dial to open the file menu pop-up.
2. Turn the **MULTI JOG** dial to select UNDO.

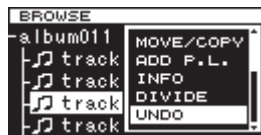

3. Press the **MULTI JOG** dial.
A confirmation pop-up message appears.

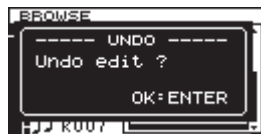

NOTE

To cancel an UNDO operation, press the EXIT/CANCEL [PEAK CLEAR] button.

4. Press the **MULTI JOG** dial to undo the file division.
"UNDO WORKING..." appears in a pop-up, and the file division is undone.



After completing the undo, the BROWSE screen reopens. The file that the undo operation was conducted on will be selected.

5. After undoing a file division, if you want to redo the division, you can execute the REDO menu item. Press the **MULTI JOG** dial to open the file menu pop-up.
6. Turn the **MULTI JOG** dial to select REDO.



7. Press the **MULTI JOG** dial to open a confirmation pop-up message.



NOTE

To cancel an REDO operation, press the EXIT/CANCEL [PEAK CLEAR] button.

8. You can press the **MULTI JOG** dial to REDO the operation. "REDO WORKING..." appears in a pop-up, and the file is divided again.



After the redo operation completes, the BROWSE screen reopens.

NOTE

The division of the currently selected file cannot be undone or redone from the BROWSE screen. To undo or redo file division, use the UNDO and REDO items on the TRACK EDIT menu page.



To UNDO file division



To REDO file division

6 – Playback

In this chapter we explain the playback functions for audio files stored on SD cards, CF cards and USB flash drives.

The following explanations assume that an SD card, CF card or USB flash drive that contains an audio file is loaded in the unit, that the unit is on and that the current media is set appropriately. (See “Selecting the media used” on page 19.)

Playable file types

This unit can play files with the following formats.

- WAV formats (wav extension)
(44.1/48/88.2/96/176.4/192kHz sampling frequency, 16/24-bit)
- DSDIFF format (dff extension) (2.8/5.6MHz sampling frequency)
- DSF format (dsf extension) (2.8/5.6MHz sampling frequency)

TIP

This unit can play back a file even if it did not record it if the file is in one of the above formats. For example, if you use a computer or another audio device to copy a file that meets the above conditions to an SD card, CF card or USB flash drive and load that media in this unit, playing that file should be possible. In other words, you can efficiently prepare materials for playback on this unit.

Files and tracks

Audio data is saved on media in "files."

When explaining recording and playback in this manual, we usually refer to audio files as "tracks" (or sometimes as "songs"). We mainly use the term "files" when explaining media management. In any case, these terms refer to the same thing.

Basic playback operations

This section explains basic operations including starting playback, playback standby and stopping.

The following explanation assume that you have completed the necessary connections, that the unit power is ON, the current device is set, media containing audio files is loaded in that device and the Home Screen is open.

Playback

To start playback, press the **PLAY** button (or remote control **PLAY** button).

If no audio file that can be played back by this unit is on the current media, the Home Screen will appear as follows.



To stop playback:

Press the **STOP** button.

To pause playback and enter playback standby:

Press the **PAUSE** button.

Selecting tracks

If the play area has more than one track, you can either skip backward or forward to the track or enter the track number directly to select a track for playback.

Skipping to the previous or next track

Use the ◀◀ [◀◀]/▶▶ [▶▶] buttons on the main unit or remote control to skip tracks.

Selecting tracks directly

On the **BROWSE** screen, you can turn the **MULTI JOG** dial to select a track, and press the **PLAY** button to start playing it.

Searching backward and forward

You can search forward or backward in a track while listening to the audio.

1. Play the desired track or put it into playback standby.
2. Press and hold the ◀◀ [◀◀]/▶▶ [▶▶] button on the front panel or remote control to start searching backward or forward.
The usual backwards / forwards speed is 10x normal playback, but during the a reverse search, pressing the ◀◀ [◀◀] button or during a forward search, pressing the ▶▶ [▶▶] button again will increase the speed to 100x for as long as that button is kept pressed.
3. To stop searching, release the button you are holding.
The unit will return to the state it was in before searching (playback standby or playback).

NOTE

- If you search forward to the end of a track, searching will skip to the beginning of the next track and continue.
- If you search forward to the end of the last track, the unit will enter playback standby unless the repeat setting is **ALL**, in which case searching will skip to the beginning of the first track and continue. (See “Repeat playback” on page 38.)
- If you search backward to the beginning of a track, searching will skip to the end of the previous track and continue.
- If you search backward to the beginning of the first track, the unit will enter playback standby unless the repeat setting is **ALL**, in which case searching will skip to the end of the last track and continue. (See “Repeat playback” on page 38.)

Locating to specific positions

If you use a USB keyboard with a number pad or a USB number pad, you can locate to specific positions when the unit is stopped, playing back or in playback standby.

Press the * (asterisk) key to clear the track number and time display and prepare the unit to receive numeric input.

Use the numeric keypad to enter numbers in the following order.

- Track number: 3 digits
- Elapsed time from track beginning: 2 digits each for hours, minutes, seconds

For example, if you want to specify a location that is 1 minute 30 seconds from the beginning of track 2, you would press keys in the following order.

0 → 0 → 2 → 0 → 0 → 1 → 3 → 0

When you finish entering the nine digits, the unit will automatically locate to the specified position.

After locating to the new position, the unit will resume the same status as before (stopped, in playback standby or playing back).

This means playback will start automatically from the located position only during playback

Locating to a position after partial entry

If you press the **MULTI JOG** dial, **PLAY** button or **PAUSE** button on the front panel (or remote control **PLAY** button or **F1** button) before you finish entering the time, you will locate to the position that is specified at that point.

For example, suppose you input only:

0 → 0 → 2 → 0 → 0 → 1 → 2

Then, if you press the **MULTI JOG** dial, **PLAY** button or **PAUSE** button, the unit will locate to 12 minutes after the beginning of track 2.

The button pressed when locating determines what happens after locating.

MULTI JOG dial pressed:

The unit resumes playback or playback standby according to the status before locating.

PLAY button pressed:

Playback starts.

PAUSE button pressed:

The unit enters playback standby.

Remote control PLAY button pressed:

If playing back before locating, playback pauses after locating.

If stopped or in playback standby before locating, playback starts after locating.

Adding marks manually during playback

When stopped, when in playback standby or during playback, you can add marks manually to the track in any positions you like. During track playback, you can move quickly to marks.

Adding marks during playback

When a track is stopped, playing back or in playback standby, press the **MULTI JOG** dial (or remote control **MARK** button) at any point where you want to add a mark.

NOTE

- Each track can store information for a maximum of 99 added marks.
- You can also add marks during recording. (See "Adding marks manually during recording" on page 27.)
- When adding a mark manually, the Mark Name "MARKxxx" * is used.
* "xxx" is a number that increments through all MARKs in this track.

Locating to marks

When a track is stopped, playing back or in playback standby, you can turn the **MULTI JOG** dial (or use the remote control **F3** [+] / **F4** [-] buttons) to locate to marks.

Turn the **MULTI JOG** dial right to locate to the nearest later mark or left to locate to the nearest previous mark from the current position.

When locating to a MARK point, that MARK point's name is displayed in the button section of the HOME screen. Also, if a MARK point is passed during playback, that MARK point's name is also displayed.

By pressing the **HOME/DISPLAY** button, the MARK Point name for the current position is also displayed.


Deleting marks

You can delete an added mark when stopped or when in playback standby.

1. Move to the mark that you want to delete. (See "Locating to marks" on page 37.)
2. Press the **MULTI JOG** dial to open the DELETE MARKS pop-up.



3. Turn the **MULTI JOG** dial to select whether to delete one mark or all marks in a file.
Options:
SINGLE: Delete only the selected mark.
ALL: Delete all the marks added to the current file.
4. Press the **MULTI JOG** dial to delete the mark or marks.
If you selected SINGLE, the Home Screen will reappear after the selected mark is deleted.
If you selected ALL, a confirmation pop-up message will appear.

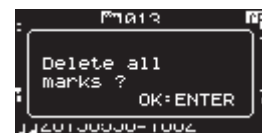

Press the **MULTI JOG** dial again to delete all the marks added to the current file.
The Home Screen will reappear after all the marks are deleted.

NOTE


To cancel marked deletion, press the **EXIT/CANCEL** [PEAK CLEAR] button.

6 – Playback


Setting the PLAY Mode

Setting the PLAY mode.

1. Press the **MENU** button to open the menu screen **PLAY FUNC** page, and turn the **MULTI JOG** dial to select **PLAY MODE**.

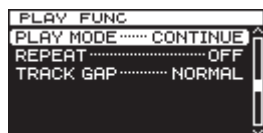

2. Press the **MULTI JOG** dial to open the **PLAY MODE** screen.

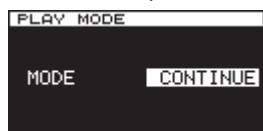

3. Turn the **MULTI JOG** dial to select the Play mode.
Options: "CONTINUE" (default) - Continues to play all tracks from track 1 through to the last one.
"SINGLE" - Plays only the currently selected track.
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

By using the combination of Repeat Playback and Play Mode = SINGLE, a single track can be looped endlessly.


Repeat playback

You can set the unit to play tracks repeatedly.

1. Press the **MENU** button repeatedly to open the **PLAY FUNC** menu, and turn the **MULTI JOG** dial to select **REPEAT**.



2. Press the **MULTI JOG** dial to open the **REPEAT** screen.

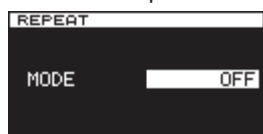

3. Turn the **MULTI JOG** dial to select the repeat playback mode.
Options:
OFF (default): Repeat playback disabled
ON: Repeat playback enabled
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.
5. After completing the setting, press the **HOME/DISPLAY** button (or remote control **F2** button) to return to the Home Screen.
6. Select the track that you want to play back repeatedly and start playback.

Setting gapless playback mode


You can set the unit so that gaps (silent intervals) between tracks during playback are eliminated.

If you want audio data, including tracks recorded using the auto track and track increment functions, to play back continuously without gaps between tracks, set the track gap mode to **GAPLESS**. When the track gap mode is **NORMAL**, brief silences will occur between tracks.

1. Press the **MENU** button to open the menu screen **PLAY FUNC** page, and turn the **MULTI JOG** dial to select **TRACK GAP**.



2. Press the **MULTI JOG** dial to open the **TRACK GAP** screen.

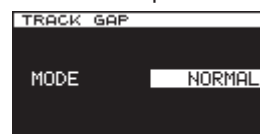

3. Turn the **MULTI JOG** dial to select the track gap mode.
Options: **NORMAL** (default), **GAPLESS**
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

CAUTION

*If **GAPLESS** is selected during DSD file playback*

*Depending on the status of the audio data, noise might occur at the division between tracks due to the nature of DSD files. If the noise is bothersome, set the track gap mode to **NORMAL** to avoid it. (Noise will not occur during the gapless playback of audio from tracks created using this unit's auto track and track increment functions, for example.)*

Overview of playlist editing

Whenever you load an SD card, CF card or USB flash drive into this unit for the first time, one empty playlist is automatically created on that media. You can also create new playlists.

Opening the playlist screen

You can view playlists from the **BROWSE** screen.


When you have format media using this unit, a file named "Playlist001" will be created automatically in the Playlist folder, which is in the first level of the **ROOT** folder. You can also create new playlists inside the Playlist folder. (See "Creating a new playlist" on page 40.)

The following procedures explain how to view "Playlist001," which was automatically created when the media was formatted.

1. Press the **MENU** button to open the **GENERAL** page of the menu screen, and turn the **MULTI JOG** dial to select **BROWSE**.




2. Press the **MULTI JOG** dial to open the **BROWSE** screen.

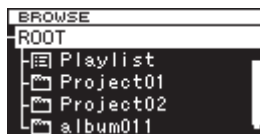


3. Select the **ROOT** folder and turn the **MULTI JOG** dial to select the **Playlist** folder.



Press the **▶▶ [▶▶]** button to enter the **Playlist** folder, and show **Playlist001** that was automatically created.

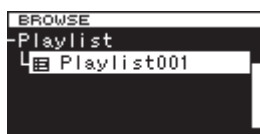

4. Press the **▶▶ [▶▶]** button to show the tracks that have been added to **Playlist001**. If no tracks have been added, it will appear empty.

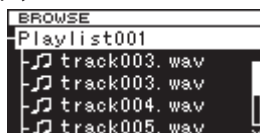

NOTE

With newly formatted media, "Playlist001" will be the current playlist. After other playlists have been created, the last open playlist will be the current playlist.

Registering tracks in a playlist

You can register tracks in a playlist. In addition, you can register a folder to add all the tracks in that folder at one time.

For details, see "Registering folders and files in a playlist" on page 32.

Using the playlist menu

With the "Playlist" folder or a playlist selected, press the **MULTI JOG** dial to open the playlist pop-up menu. This is the menu to use when you want to work with the "Playlist" folder or a playlist.

NOTE

*If you select the "Playlist" folder or the current playlist and open the pop-up menu, the **RENAME** and **DELETE** items will not be shown.*

SELECT

Set the selected playlist as the current playlist, and show the files that have been added to it. (See "Moving around playlists" on page 39.)

If you select this when the files registered in the playlist are shown, the "Playlist" folder will reopen.

RENAME


Change the playlist name. (See "Changing playlist names" on page 40.)

DELETE

Delete the playlist. (See "Deleting playlists" on page 40.)

INFO

Shows the number of tracks included in the playlist and their total playback time, as well as the playlist creation date in a pop-up.

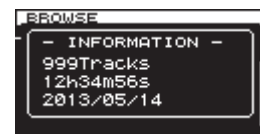

CREATE

Create a new playlist. (See "Creating a new playlist" on page 40.)

NOTE

*When a protected SD card is loaded, the **RENAME**, **DELETE** and **CREATE** items cannot be used. (See "SD card write protection" on page 18.)*

CANCEL

Do nothing with the currently selected playlist and close the playlist menu.

Moving around playlists

Press the **◀◀ [◀◀]** button to move up one level from the current position, and press the **▶▶ [▶▶]** button to move down one level. You can also press the **MULTI JOG** dial to open the pop-up playlist menu and select the **SELECT** item to move up or down a level in the same manner.



7 – Editing playlists

Changing playlist names

1. Select the folder that you want to change the name of, and press the **MULTI JOG** dial to open the playlist pop-up menu.
2. Turn the **MULTI JOG** dial to select **RENAME**.



3. Press the **MULTI JOG** dial to open the **RENAME** screen.



4. Edit the playlist name.
See "Inputting and editing characters" on page 28 for details about editing text.
5. After you finish editing the playlist name, turn the **MULTI JOG** dial to select Enter, and press the **MULTI JOG** dial to confirm the name.
"RENAMING..." appears in a pop-up, and the playlist name is changed.



After the playlist name is changed, the **BROWSE** screen reopens.

CAUTION

- Names that contain characters other than the letters of the alphabet, numbers and symbols cannot be edited (the name will not appear when the **RENAME** function is being used).
- The following symbols and punctuation marks cannot be used in names.

¥ \ / ; : , * ? " < > |

Deleting playlists

Playlists can be deleted.

NOTE

You cannot delete the current playlist.

1. Select the playlist that you want to delete and press the **MULTI JOG** dial to open the playlist pop-up menu.
2. Turn the **MULTI JOG** dial to select **DELETE**.



3. Press the **MULTI JOG** dial.
A confirmation pop-up message appears.



NOTE

*To cancel the deletion of a playlist, press the **EXIT/CANCEL** [**PEAK CLEAR**] button.*

4. Press the **MULTI JOG** dial to delete the selected playlist.
During playlist deletion, "DELETING P.LIST." appears in a pop-up.



After deletion completes, the **BROWSE** screen reopens.

NOTE

When you delete a playlist, the audio files themselves are not deleted. Only the playlist information is deleted.

To delete actual audio files, refer to the instructions in "Deleting folders and files" on page 31.

Creating a new playlist

You can create a new playlist in the current folder.

1. On the **BROWSE** screen, select the "Playlist" folder or a playlist, and press the **MULTI JOG** dial to open the playlist pop-up menu.
2. Turn the **MULTI JOG** dial to select **CREATE**.



3. Press the **MULTI JOG** dial to open the **CREATE** screen.



4. Input the name that you want to give the playlist.
See "Inputting and editing characters" on page 28 for details about editing text.
5. After you finish inputting the playlist name, turn the **MULTI JOG** dial to select Enter, and press the **MULTI JOG** dial to confirm it.
A confirmation pop-up message appears.



NOTE

*To cancel creation of a playlist, press the **EXIT/CANCEL** [**PEAK CLEAR**] button.*

6. Press the **MULTI JOG** dial to create the new playlist.
"CREATING ..." appears in a pop-up, and the new playlist is created.



After creation, the **BROWSE** screen reopens.

Playlist track menu operations

When a track that has been added to the playlist is selected, press the **MULTI JOG** dial to open the pop-up playlist track menu.

Use this menu to work with a track that has been added to a playlist.

SELECT

Open a track that has been added to the current playlist, and return to the Home Screen.

ORDER

Change the order of tracks that are already in the playlist. (See “Changing the playlist track order” on page 41.)

REMOVE

Remove a track from the playlist. (See “Removing tracks from playlists” on page 41.)


INFO

The following information is shown for the track that has been added to a playlist.

This information is shown on two pages. Press the **MULTI JOG** dial to open the second page.

1st page: Total track time/file size
File format
Sampling frequency

2nd page: Creation date

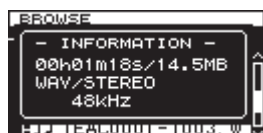

NOTE

When a protected SD card is loaded, the ORDER and REMOVE items cannot be used. (See “SD card write protection” on page 18.)

CANCEL

Do not conduct any operation related to the currently selected playlist track and close the playlist track menu.

Changing the playlist track order

You can change the order of tracks that have been added to a playlist one at a time.

1. Select the track that you want to rearrange on the BROWSE screen, and press the **MULTI JOG** dial to open the playlist track pop-up menu.
2. Turn the **MULTI JOG** dial to select ORDER.



3. Press the **MULTI JOG** dial. The track to be reordered blinks.
4. Turn the **MULTI JOG** dial to move that track to the position in the order where you want it, and press the **MULTI JOG** dial to confirm the new position.
When the “MOVING ...” pop-up appears, the track is being moved.



After completion, the BROWSE screen reopens.

Removing tracks from playlists

To remove a track from a playlist, use the track menu REMOVE item.

This operation only removes tracks from playlists. It does not delete the audio files themselves.

1. Choose the track in the playlist that you want to delete and press the **MULTI JOG** dial to open the playlist track menu pop-up.
2. Turn the **MULTI JOG** dial to select REMOVE.



3. Press the **MULTI JOG** dial.
A confirmation pop-up message appears.



NOTE

To cancel removal, press the EXIT/CANCEL [PEAK CLEAR] button.

4. Press the **MULTI JOG** dial to remove the file from the playlist.
“REMOVING ...” appears in a pop-up and the track is removed.



After the track is removed, the BROWSE screen reopens.

NOTE

If you want to delete the audio file itself, see the instructions in “Deleting folders and files” on page 31.

8 – Miscellaneous functions

INFO button and indicator

If you press the **INFO** button, which is in the middle of the front panel, when its indicator is lit blue, the current operation status of the unit is shown on the display. If you press the **INFO** button when its indicator is lit red, an error message will appear on the display.

Operation status display (indicator blue)


INFORMATION	
CLOCK	48kHz INTERNAL
FILE	WAV 16bit STEREO 2017/08/09

Information shown:


CLOCK	Sampling frequency/clock source
FILE	File type/quantization bit rate Recording mode (stereo/mono) Recording date

When the indicator is lit blue, each time you press the **INFO** button, the display will alternate between the operation status and the Home Screen.

Alert display (indicator red)

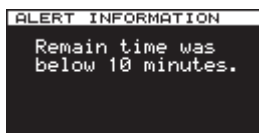

Displayed alert (1)

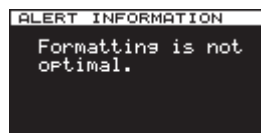

Displayed Alert (2)

Information shown:

- (1) The remaining record time is less than 10 minutes. This alert is displayed when a recording has continued past the point that only 10 minutes worth of data will fit on the media.
- (2) The media was formatted on a different product or computer. It is possible that recording or playback errors may occur, so it is recommended to re-format the media on this unit.

Once the alert is displayed and acknowledged, Alert (1) will not re-appear until after recording is stopped, and Alert (2) will not re-appear until a different media is inserted.

Error message (indicator red)

ERROR INFORMATION	
Master clock is unlocked.	
Digital input is unlocked.	

Information shown:

Master clock/digital input error

Pressing the **INFO** button toggles the display in the order ALERT information → Error Information → Operational Status → Home Screen. The ALERT information and Error displays are only viewable when such an event has occurred and the **INFO** button is red.

Copying files between media (backing up)

You can copy all the contents of one medium to another (creating a backup).

CAUTION

Before copying (backing up) the destination media is automatically formatted.

1. Press the **MENU** button to open the MEDIA menu, and turn the **MULTI JOG** dial to select COPY.



2. Press the **MULTI JOG** dial to open a pop-up with copy (backup) destination options.



3. Turn the **MULTI JOG** dial to select copy destination. Options:

When the current media is an SD card:

SD>>>CF (default), SD>>>USB


When the current media is a CF card:

CF>>>SD, CF>>>USB

When the current media is a USB card:

USB>>>SD, USB>>>CF

4. Press the **MULTI JOG** dial to open a confirmation pop-up message.

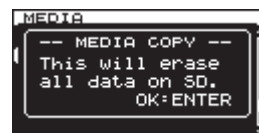

NOTE

To cancel copying (backing up), press the EXIT/CANCEL [PEAK CLEAR] button.

5. Press the **MULTI JOG** dial again to start copying (backing up). While copying (backing up), "COPYING MEDIA..." appears in a pop-up. When copying (backing up) completes, the menu screen will reopen.

Viewing information about the media


You can view information about the media in the current device.

1. Press the **MENU** button repeatedly to open the **MEDIA** menu, and turn the **MULTI JOG** dial to select **INFO.**



2. Press the **MULTI JOG** dial to open the **MEDIA INFORMATION** screen.

Information about the current media is shown. You can check its total capacity, open space and total number of folders.

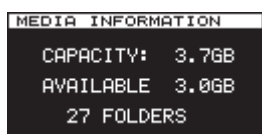


Restoring the factory settings


You can restore all the settings that are stored in the unit's backup memory to the values that they had when shipped from the factory.

Follow these steps using the menu to restore the settings.

1. Press the **MENU** button repeatedly to open the **UTILITY** menu, and turn the **MULTI JOG** dial to select **F.PRESET**.

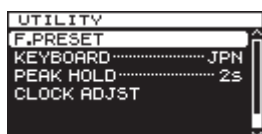

2. Press the **MULTI JOG** dial to open a confirmation pop-up message.

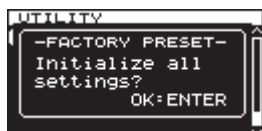

NOTE

*To cancel, press the **EXIT/CANCEL [PEAK CLEAR]** button.*

3. Press the **MULTI JOG** dial again to restore the unit settings to their factory defaults.
"READING MEDIA ..." appears in a pop-up.
When restoration completes, the menu screen reappears.

Using a USB keyboard

By connecting a Windows-compatible USB keyboard or numeric keypad to the **KEYBOARD** connector on the front panel of the main unit, you can use it to operate this unit.

Various types of control are possible, but using a keyboard is particularly efficient for inputting text.


Setting the keyboard type

Set the keyboard type to match the one you have connected.

1. Press the **MENU** button repeatedly to open the **UTILITY** menu, and turn the **MULTI JOG** dial to select **KEYBOARD**.



2. Press the **MULTI JOG** dial to open the **KEYBOARD TYPE** screen.

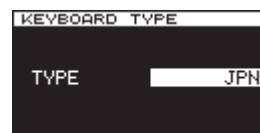

3. Turn the **MULTI JOG** dial to select **US** (US English keyboard) or **JPN** (Japanese keyboard).
Options: JPN (default), US
4. Press the **MULTI JOG** dial to confirm the setting and return to the menu screen.

8 – Miscellaneous functions

Using a keyboard to input text

You can input and edit folder and file names in the same way you would type text on a computer.

In character input mode:

You can use and directly input characters with ordinary number, character and symbol keys.

To move the cursor:

Use the ordinary arrow (← and →) keys.

To delete a character:

Delete key: Delete the character at the cursor position.

Backspace key: Delete the character to the left of the cursor position.

To insert a character:

You can input a characters at the desired position (in default insert mode).

If the character input mode is not the default insert mode, press the Insert key to switch to insert mode before inputting the character.

To edit a character:

Press the Insert key to enter overwrite mode, and then move the cursor to the character you want to edit and input the new character.

CAUTION

- The following symbols and punctuation marks cannot be used in names.

¥ \ / ; : , * ? " ' < > |

- Japanese katakana cannot be input.

Keyboard operation list

You can use the keyboard not only for entering text, but also for other operations such as controlling the transport and editing.

The keys on the keyboard have functions that correspond to the buttons on the front panel of the main unit as shown below. Moreover, character input mode is activated automatically according to the current operation of the unit.

Full keyboard

Keyboard key(s)	Operation
Esc key	Same as the EXIT/CANCEL [PEAK CLEAR] button
F1 key	Same as the HOME/DISPLAY button
F2 key	Same as the INFO button
F3 key	Same as the MENU button
F12 key	Same as the RECORD button
R key	Search backward
P key	Skip to the previous track
S key	Stop
F key	Search forward
N key	Skip to the next track
Enter key	Same as pressing the MULTI JOG dial (Add/delete a mark)
Space bar	Same as the PLAY button and PAUSE button
↑ key	Same as the ▶▶I button during transport operation. Moves the cursor up at other times.
↓ key	Same as the I◀◀ button during transport operation. Moves the cursor down at other times.
← key	Same as turning the MULTI JOG dial left during transport operation (move to the next earlier mark). Moves the cursor left at other times.
→ key	Same as turning the MULTI JOG dial right during transport operation (move to the next later mark). Moves the cursor left at other times.

Numeric keypad (transport operation only)

Keyboard key(s)	Operation
. (period) key	STOP button
0 key	Same as the PLAY button and PAUSE button
1 key	Same as the ◀◀ button
2 key	Same as the ▶▶ button
3 key	Same as the RECORD button
7 key	Same as the I◀◀ button
8 key	Same as the ▶▶I button
– key	Same as turning the MULTI JOG dial left (move to earlier mark in track)
+ key	Same as turning the MULTI JOG dial right (move to later mark in track)
Enter key	Same as pressing the MULTI JOG dial (add a mark)

9 – Message Lists

The following is a list of the pop-up messages that might appear on the SD-500HR under certain conditions. Refer to this list if one of these pop-up messages appears and you want to check the meaning or determine a proper response.

Message	Meaning
Cannot set Mark. Limit reached.	The maximum number of marks that can be set has been reached, so a new mark cannot be added.
Create Playlist failed.	The creation of a new playlist failed.
Divide failed.	Division was not possible.
Operation Failed.	The execution of some operation failed.
Operation Failed. Folder limit.	The maximum number of folders has been reached so a new folder could not be created.
Operation Failed. long name Path Name is too long.	The total number of characters in the full file path and file name exceeds 255.
Rename failed.	The RENAME operation could not be executed.
SD Card Locked.	The SD card is locked.
This file already exists.	When RENAME or another operation was conducted, another file with the same name already existed.
This folder already exists.	When RENAME or another operation was conducted, another folder with the same name already existed.
Un/Redo failed.	The REDO operation failed.
CLOCK LOST Switched to internal.	Master clock synchronization became unlocked. The unit switched to its internal clock.
- CANNOT COPY - Not Enough space on Media.	Not enough open space is available on the media, so copying is not possible.
- CANNOT INC. - Media full or too short interval.	Incrementing the track was not possible because either the interval was too short or the media does not have enough space.
- CANNOT MOVE - Mono file is not supported.	Moving mono x2 files is not supported, so moving is not possible.
- CANNOT MOVE - This name already exists.	Moving is not possible because another file already has the same name.
--- CAUTION --- Cannot execute. Media Full.	Editing is not possible because the media does not have enough open space.
--- CAUTION --- Formatting not optimal for Recording/Search	This media format is not recommended.
--- CAUTION --- Not possible now Please Stop first.	Stop the unit before executing this function
--- CAUTION --- Not recommended type for Recording/Search	This media is not recommended.
--- CAUTION --- RECORD stopped. ABS time limit.	Recording stopped because more than 24 hours elapsed.
--- CAUTION --- RECORD stopped. Media Full.	Recording stopped because the media ran out of open space.
-- COPY FAILED --	Copying failed.
- DEVICE ERROR -	An error occurred with the device.
-- DIN ERROR --	An error occurred during digital input.

9 – Message Lists

Message	Meaning
--- ERROR --- INFO WRITING.	An error occurred at the end of recording.
--- ERROR --- General Error needs to STOP.	A general error occurred.
--- ERROR --- Unsupported File. (too many tracks)	This file is not supported.
--- ERROR --- Unsupported Fs.	The sampling rate is not supported.
- MEDIA ERROR -	A media error occurred.
-- PLAY ERROR --	A playback error occurred.
-- PLAY ERROR -- Buffer underrun.	A buffer underrun error occurred.
-- READ ERROR --	An error occurred while reading.
-- REC ERROR --	Recording stopped because an error occurred during recording.
-- REC ERROR -- Buffer overflow.	Recording stopped because a buffer overflow error occurred.
- WRITE ERROR -	An error occurred while writing.
- CANNOT DIVIDE - Duplicate name error.	Division was not possible because a file already exists with a name that would be used by a new file after division.
-CANNOT RECORD- Media Full.	Recording is not possible because there is no open space on the media.
-CANNOT RECORD- Take limit reached.	Recording is not possible because the maximum number of files has been reached
- PLAYLIST ERROR - There are some unusable entries	There is a problem with the playlist entry information.
--- CAUTION --- Cannot play while input monitoring.	When the Input signal monitoring function is ON, and ADDA Direct mode is also ON, it is not possible to Play any tracks.
--- CAUTION --- There is no entry.	The unit attempted to Play, etc, but the Playlist has no entries in it, so there is nothing to play.
--- CAUTION --- Cannot select as master clock. Fs convert on.	The Sample Rate Converter (SRC) is already ON, so the Digital Input (DIN) cannot be selected as the Master Clock.
--- CAUTION --- Cannot turn on. D-IN is already Master Clock.	The Master Clock is already set to the Digital Input "DIN", so the Sample Rate Converter cannot be enabled.
--- CAUTION --- Must stop first.	This function or setting cannot be changed right now. Please STOP the unit, then it can be changed.

10 – Troubleshooting

If you experience a problem with the unit, please take a moment to review the following information before requesting service. Moreover, the problem might be caused by something other than this unit. Please also check the operation of the connected units. If it still does not operate correctly, contact the retailer where you purchased the unit.

■ Power does not turn on.

- ➔ Confirm that the power plug is inserted securely.

■ Media is not detected.

- ➔ Confirm that the SD card, CF card or USB flash drive is inserted securely.
- ➔ Stop playback or recording once.

■ Playback is not possible.

- ➔ If you are trying to play a WAV file, confirm that it uses a sampling frequency (44.1, 48, 88.2, 96, 176.4 or 192 kHz) and bit depth (16/24-bit) that are supported by this unit. If you are trying to play a DFF/DSF file, confirm that it uses a sampling frequency (2.8 or 5.6 MHz) supported by this unit.

■ No sound.

- ➔ Check the connections with the monitoring system and check the volume of the amplifier.
- ➔ If you cannot hear the input signal, confirm that the INPUT MONITOR screen setting is ON.
- ➔ If you cannot hear the playback signal, confirm that the INPUT MONITOR screen setting is OFF.

■ Unable to record.

- ➔ Check the connections.
- ➔ Adjust the recording level.
- ➔ If there is not enough room on the media, delete unnecessary data to increase the amount of open space or replace the media.
- ➔ If the folder already contains a large number of entries (the total number of files, folders and other items), change the recording folder.

■ Changed settings are not saved.

- ➔ This unit backs up settings whenever you change them. This backup could fail if you turn the power off while this data is being written, so do not turn the power off immediately after changing a setting.

■ I hear noise.

- ➔ Check if any connecting cable might have a bad connection.

■ When editing text, "Name Full" appears.

- ➔ Due to file system limitations, a maximum of 255 characters (halfwidth) can be used for items such as file and folder names. Moreover, the file path on the BROWSE screen is also limited to 255 characters.

■ Operation using the remote control (TEAC RC-10) is not possible.

- ➔ Confirm that a battery is installed in the remote control and that it still has a charge.

11 – Specifications

Media and formats

Recording media

SD cards:	4GB–32GB SDHC supported 64GB–256GB SDXC supported Media ejection: push-push type
CF cards:	1GB–64GB Type I supported
USB flash drives:	2GB–64GB supported

Recording/playback formats

PCM mode

Fs:	44.1, 48, 88.2, 96, 176.4 and 192 kHz
Bit depth:	16 and 24-bit
Recording:	WAV (.wav extension)
Playback:	WAV (.wav extension)

DSD mode

Fs:	2.8 and 5.6MHz
Playback and recording:	DSDIFF (.dff extension) DSF (.dsf extension)

Number of channels

2 stereo

Inputs and outputs

Analog inputs

Unbalanced

Connectors:	RCA pin jacks
Reference input level:	–10 dBV
Maximum input level:	+6 dBV
Input impedance:	22 k Ω or higher
Minimum input level:	–22 dBV

Balanced

Connectors:	XLR-3-31 (1: GND, 2: HOT, 3: COLD)
Reference input level:	+4 dBu
Maximum input level:	+20 dBu
Input impedance:	10 k Ω or higher
Minimum input level:	–8 dBu

Analog outputs

Unbalanced

Connectors:	RCA pin jacks
Reference output level:	–10 dBV
Maximum output level:	+6 dBV
Output impedance:	200 Ω or less

Balanced

Connector:	XLR-3-32 (1: GND, 2: HOT, 3: COLD)
Reference output level:	+4 dBu
Maximum output level:	+20 dBu
Output impedance:	100 Ω or less

PHONES jack

Connector:	6.3mm (1/4") standard stereo jack
Maximum output:	45 mW + 45 mW (32 Ω load, 0.1% distortion)

Digital input

S/PDIF

Connector:	RCA pin jack
Format:	IEC60958-3 (S/PDIF)
Input frequency:	44.1, 48, 88.2, 96, 176.4 or 192 kHz (when SRC OFF) 32 kHz–216 kHz (when SRC ON)
Allowable frequency deviation:	± 100 ppm (when SRC OFF)

AES/EBU (balanced)

Connector:	XLR-3-31 (1: GND, 2: HOT, 3: COLD)
Format:	AES3-2003/IEC60958-4 (AES/EBU)
Input frequency:	44.1, 48, 88.2, 96, 176.4 and 192 kHz (when SRC OFF) 32–216 kHz (when SRC ON)
Allowable frequency deviation:	± 100 ppm (when SRC OFF)

SDIF-3 (unbalanced)

Connectors:	BNC connector \times 2 (L, R)
Format:	SONY SDIF-3/DSD-raw
Clock sync frequency:	44.1 kHz (when 2.8 MHz or 5.6 MHz)

Digital output

S/PDIF

Connector:	RCA pin jack
Format:	IEC60958-3 (S/PDIF)

AES/EBU (balanced)

Connector:	XLR-3-32 (1: GND, 2: HOT, 3: COLD)
Format:	AES3-2003/IEC60958-4 (AES/EBU)

SDIF-3 (unbalanced)

Connectors:	BNC connector \times 2 (L, R)
Format:	SONY SDIF-3/DSD-raw
Clock sync frequency:	44.1 kHz (when 2.8 MHz or 5.6 MHz)

Other connectors

WORD SYNC IN

Connector:	BNC
Input level:	equivalent to 5V TTL
Input impedance:	75 $\Omega \pm 10\%$ (includes terminal on/off switch)
Input frequency:	44.1, 48, 88.2, 96, 176.4 or 192 kHz
Allowable frequency deviation:	± 100 ppm

WORD SYNC THRU/OUT

Connector:	BNC
Output level:	equivalent to 5V TTL
Output impedance:	75 $\Omega \pm 10\%$
Output frequency:	44.1, 48, 88.2, 96, 176.4 or 192 kHz (includes THRU/OUT on/off switch)
Frequency stability:	± 1 ppm or less (Ta=25°C)

USB (DEVICE)

Connector:	USB A-type 4-pin
Protocol:	USB 2.0 HIGH SPEED (480 Mbps)
Power supply rating:	DC 5.0V 0.5A

USB (KEYBOARD)

Connector:	USB A-type 4-pin
Protocol:	USB 1.1 FULL SPEED (12 Mbps)
Power supply rating:	DC 5.0V 0.2A

Audio performance

Recording

Distortion (THD+N, 1kHz)

PCM 24bit mode and DSD mode

0.005% or less (UNBALANCED, JEITA)

S/N

PCM 24bit mode

111 dB or higher (UNBALANCED, JEITA)

DSD mode

106 dB or higher (Ref: -20dB/BALANCED, AES-17 20k LPF)

104 dB or higher (UNBALANCED, AES-17 20k LPF)

Frequency response

PCM mode

Fs = 44.1 or 48 kHz

20 Hz–20 kHz: +0.1 dB, –0.5 dB (JEITA)

Fs = 88.2 or 96 kHz

20 Hz–40 kHz: +0.1 dB, –1 dB (JEITA)

Fs = 176.4 or 192 kHz

20 Hz–80 kHz: +0.1 dB, –6 dB (JEITA)

DSD mode

20 Hz–50 kHz: +0.1 dB, –3 dB (JEITA)

20 Hz–100 kHz: +0.1 dB, –12 dB (JEITA)

Crosstalk (1kHz)

PCM 24bit mode and DSD mode

105 dB or higher (JEITA)

Playback

Distortion (THD+N, 1kHz)

PCM 24bit mode and DSD mode

0.003% or less (BALANCED, JEITA)

0.001% or less (UNBALANCED, JEITA)

S/N

PCM 24bit mode

118 dB or higher (Ref: –20dB/BALANCED, JEITA)

116 dB or higher (UNBALANCED, JEITA)

DSD mode

116 dB or higher (Ref: -20dB/BALANCED, AES-17 20k LPF)

114 dB or higher (UNBALANCED, AES-17 20k LPF)

Frequency response

PCM mode

Fs = 44.1 or 48 kHz

20 Hz–20 kHz: ±0.1 dB (JEITA)

Fs = 88.2 or 96 kHz

20 Hz–40 kHz: +0.1 dB, –0.3 dB (JEITA)

Fs = 176.4 or 192 kHz

20 Hz–80 kHz: +0.1 dB, –3 dB (JEITA)

DSD mode

20 Hz–50 kHz: +0.1 dB, –3 dB (JEITA)

20 Hz–100 kHz: +0.1 dB, –12 dB (JEITA)

Control input

Infrared sensor

TEAC RC-10 wireless remote control

General

Power

AC 120 V, 60 Hz (U.S.A./Canada)

AC 220 V–240 V, 50 Hz–60 Hz (U.K./Europe/Australia)

Power consumption

24 W

Dimensions(W × H × D)

442.6 × 57.5 × 305 (mm) / 17.42 × 2.26 × 12 (in)

(including protrusions)


Weight

4.4 Kg (9.7 lb)

Operating temperature range

0–40°C (32–104°F)


Dimensional drawings

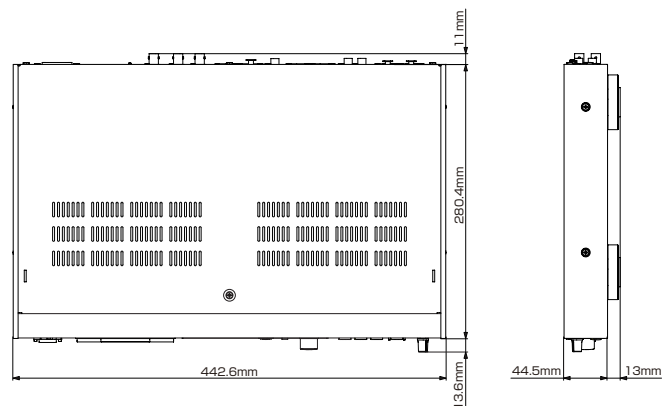

- Illustrations and other depictions may differ in part from the actual product.
- Specifications and external appearance may be changed without notification to improve the product.

11 – Specifications

Block diagram

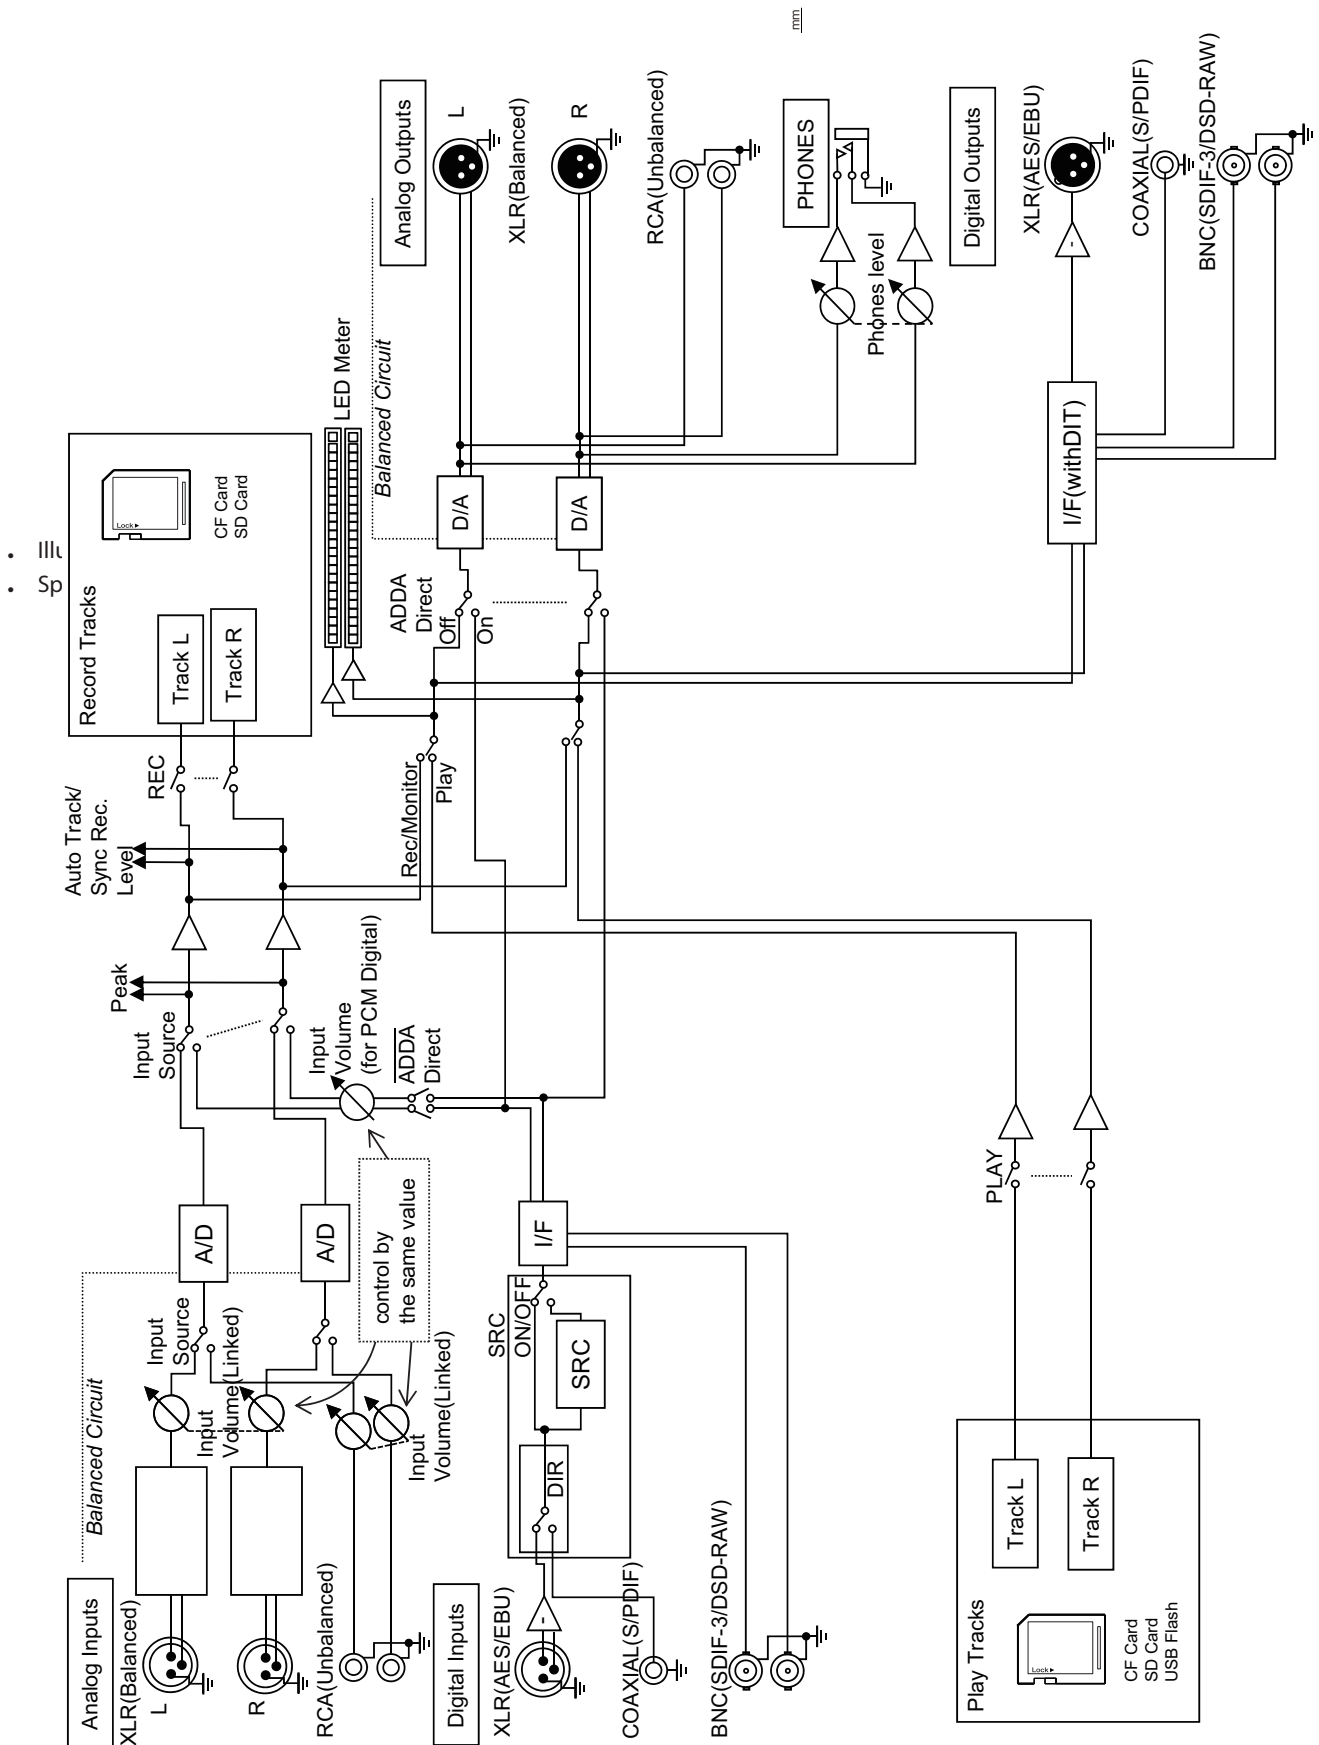

WARRANTY

This warranty gives you specific legal rights, and you may also have other rights that vary by country, state or province. If you have a warranty claim or request, please contact the dealer where you bought the product.

该保证书赋予了顾客特定的合法权利，并且因国家，州或省等地域的不同，顾客可能拥有其他权利。如需申请或要求保修，请与购买本产品的销售店进行联系。

TEAC

TEAC CORPORATION	1-47 Ochiai, Tama-shi, Tokyo 206-8530 Japan	Phone: +81-42-356-9156
TEAC AMERICA, INC.	1834 Gage Road, Montebello, California 90640 U.S.A.	Phone: +1-323-726-0303
TEAC AUDIO EUROPE	Gutenbergstr. 3, 82178 Puchheim, Germany	Phone: +49-8142-4208-141

This device has a serial number located on its rear panel. Please record the serial number and retain it for your records.

Model name: SD-500HR Serial number: _____